



Autoterm Comfort Control Quick Set and Operating



Normal Blank Screen



1) Turn Main Knob to bring screen to life




2) Press Knob TWICE



This brings up the Temperature setting screen



3) Turn Knob to the desired Room Temperature

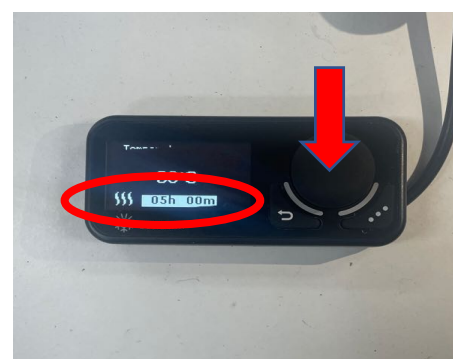

4) Press Main Knob to bring up the RUN Time



5) Turn Knob set the desired Runtime. The infinity symbol will allow the heater to run until you turn the heater off



6) Press knob again and heater will run - running mode shows with the Red Lights glowing



To Turn Off the Heater Press the Button in the lower RH corner



Green Lights show the heater has gone into shutdown mode

Super Quick Instructions



Press/Turn knob to bring screen to life



Press Corner Button to Start Heater



Red Lights show Heater in Heating Mode



Press Corner Button to Stop Heater



Comfort Control PU-CC