



Distributed by:

Coast to Coast RV Services

Australian Head Office

P: +612 9645 7600

E: salesnsw@coastrv.com.au

 
W: www.coastrv.com.au

New Zealand Head Office

P: +614 9 274 8700

E: enquiry@coastrv.co.nz

W: www.coastrv.co.nz

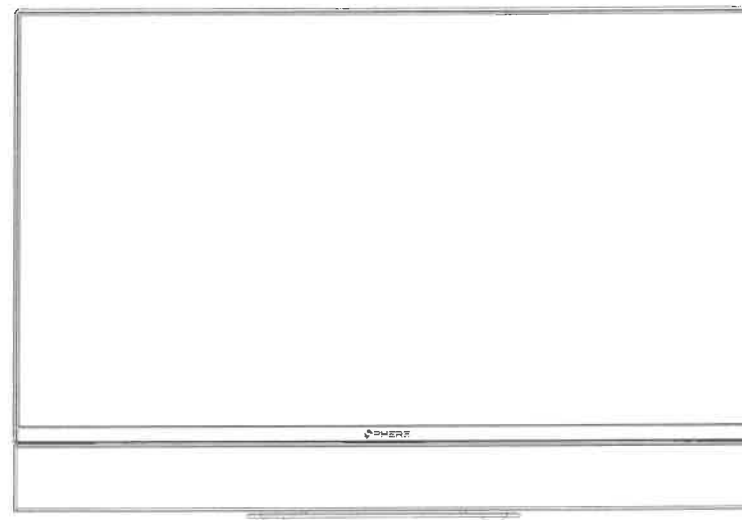

S9 24"/27"
FHD LED TV

USER MANUAL

Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.

Made in China



The Manual Applies to below models:

S924TVDVDSB

S924TVSB

S927TVDVDSB

S927TVSB

Accessories

 
Please make sure the following items are included with your LED TV.
If any items are missing, contact your dealer.



Remote Control &
Batteries (AAAx 2)



Instruction
manual

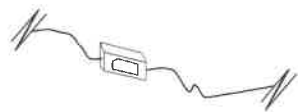

Adapter

Model: RS-400/120-S338(24"/27")

Input : 100-240V~50/60Hz 1.5A Max(24"/27")

Output: 12V → 4A ⚡ (24"/27")



3M 12V Car lead



Stand/Screws
24"/27"



Mini AV



Mini YPBPR



TV Wall mounting Screws BM4*6mm 4pcs



GTV box (included in Smart TV models, also available separately)

Safety

Please immediately pull out the AC power plug from adapter if there is an abnormal sound or smell or the LED TV has sound but no picture, and contact after sales support.



The LED TV should be kept SAFE from rain, damp and dust to prevent electrical shock and short circuits.
Do not cover the ventilation openings with table cloths, curtains, newspapers etc.

 


The LED TV should be kept Away from high temperature heating objects or direct sunlight. It requires good ventilation. Allow 10cm between the LED TV and other appliances or built-in cabinet walls.




You may clean the display panel with a soft clean cloth after pulling out the power plug. Do not repeatedly wipe the panel, nor scrape, tap or strike the panel with a hard object.

Do not wipe the LED TV with any petrol, chemical or alcohol based solvents as it will lead to product damage of the panel and cabinet.

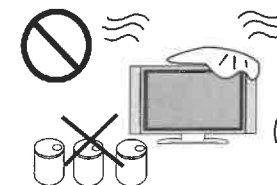


Safety

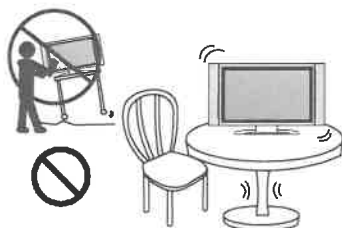 



Do not place the LED TV on an unstable surface.

 Do not place the power cord or other cables across a walkway in case it is trampled on.
Do not overload the power cord or power socket.

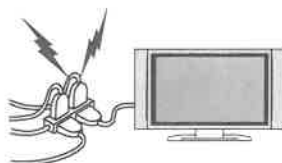

Do not disassemble the back cover as it contains high voltages inside and will cause electric shock. Internal adjustments and checks should only be conducted by qualified professionals.

  Do not place naked flame sources, such as lit candles on or near the LED TV.
Please pull out the power plug and contact after sales support if there are abnormal objects or water in the TV.

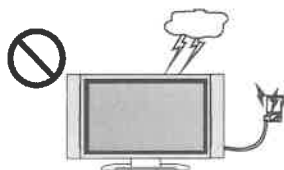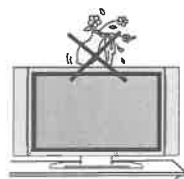

Pull out the power cord and antenna cable during electrical storms so the LED TV is not damaged by electrical surges. Keep all people away from the antenna cable during electrical storms.

Contents

Installation	2
Connections	3
Basic Operation	4
Remote Control	5
TV Operation	
Select input source	6
First time settings	7
Channel menu	8
Picture menu	11
Sound menu	12
Time menu	13
Lock	14
Option menu	15
Media Operation	
Photo menu	16
Music menu	17
Movie menu	17
Text menu	18
Google TV	
What's included	19
Device information	19
Setup diagram	20
Remote control	20
Setup guide	21
Specification	22
Safety Information	22
Declaration	23
DVD	24
Troubleshooting	26
Important Safety Instructions	27
Warranty Information	28

Installation

Thank you very much for your purchase of this product. Please read this manual carefully and keep it safe for reference. Please use the power cord designated for the product. When an extension cord is required, use one with the correct power rating. The cord must be grounded. The product should be installed on a flat surface to avoid tipping. Space should be maintained between the back of the product and the wall for proper ventilation. If you would like to mount the TV to the wall, please see "Preparing the LED for Wall Mounting" below for additional information. Avoid installing the product in the kitchen, bathroom or other places with high humidity.

Preparing Your LED TV For Wall Mounting

The HDTV can either be kept on the stand or mounted to the wall for viewing. If you choose to mount the HDTV to the wall, please follow the instructions below.

Unplug all the cables and cords from your LED TV.

Place the LED TV face down on a soft and flat surface (blanket, foam, cloth, etc) to prevent any damage to the display.

Remove the stand screws allowing the stand to be removed.

The mounting bracket is made up of two parts-the wall bracket and the TV bracket. Attach the TV bracket to the TV via the included screws. Included with your wall mount kit (Please check the instruction manual of the wall mount for further information) Attach the wall bracket to the wall with appropriate screws. Ensure the wall is suitable to hold the weight of the TV. (Please check the instruction manual of the wall mount for further information)

Slide the TV bracket into the wall bracket

Ensure the wall mount is secured and locked in travel position when the RV is in transit

Important Notes

RESET: Like any product controlled by microprocessors this TV may hang or become unresponsive. In the unlikely event this occurs simply disconnect the power and reconnect after 10 seconds.

REMOTE: To prevent leakage which may result in bodily harm or damage to the remote:

1. Install AAA batteries correctly, and make sure polarities are correctly aligned with the battery compartment markings.
2. Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc)
3. Remove batteries when the remote is not used for a long time.

My music, movie or image files do not display?

Due to the large variation of file sizes, compression formats and codec available, playback of all files cannot be guaranteed.

I cannot record onto my USB flash drive?

FAT 32 formatted flash drive is required.

Time Shift functionality does not work?

FAT 32 formatted flash drive is required

Warning! Do not keep images on the screen for a long time

To prevent the screen from burn in, do not leave static images including menu screens displayed for a period of time. Burn in is not covered under warranty provision.

ATTENTION: Do not try to update the TV unless directed by a service technician. Product misconfigured by an incorrect update is not covered under warranty.

Connections

Bottom Connection Panel:



Power :

Connect the AC power pack or 3M 12V RV lead to the 12VDCIN connection on the TV.

CVBS OUT:

This mirrors the Video Signal from Input 12 (A/V) ONLY. The output is Video only.

LINE OUT:

Audio output for external devices such as Head Units, amplifiers etc.

Earphone :

Digital Audio output for surround sound/sound bars etc.

ANT IN:

Connect the antenna to the RF IN connection. Please refer to the notes below.

HDMI :

Connect the HDMI output of the accessory device to the HDMI input on the TV. Select the HDMI input source using the INPUT button on the remote.

NOTE:

Do not put the Coaxial cable close to the mains lead to avoid noise.

Do not place the Coaxial cable under the TV.

Additional equipment, cables and adapter plugs shown are not supplied with this TV set.

To obtain optimum quality picture and sound, an Aerial, the correct cable (75 Ω coaxial) and the correct terminating plug are required.

Your local dealer may be able to assist you in obtaining the correct Aerial system for your particular area and the accessories required.

CEC:

 
There are two selections: ON and OFF, when you choose ON, you can operate a compatible HDMI-CEC controlled device.

Amplifier Support ARC:

There are two selections: ON or OFF, it is available when the Speaker Preference is set to Amplifier. When selected to ON, sound from will be heard, when selecting OFF, no sound from the Amplifier will be heard.

This TV is fitted with the worldwide standard IC solution for ARC compatibility. There may be some slight compatibility issues in head units with non-standard IC solutions installed. You may need to switch the Head Unit off/on again in order for ARC to reconnect in some cases.

Side Connection Panel:

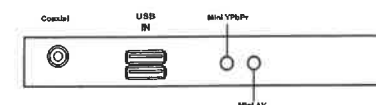

Coaxial :

Digital Audio output for surround sound/sound bars etc.

USB :

 
Insert the USB flash drive into the USB slot on the TV. This slot can also be used to supply power for Homatics Google TV Smart Stick

Mini YPbPr : Component Video in.

Mini AV : Composite Video & Audio in.

Basic Operation

Control Description

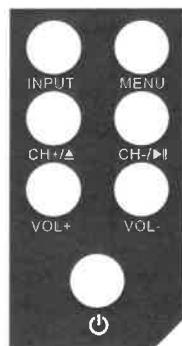

Press **INPUT** to select the input source.

Press **MENU** to bring up the main menu screen.

Press **CH+** or **CH-** to scan through channels.

Press **VOL+** or **VOL-** to decrease or increase the sound level.

Press **▲** to eject the disc when in DVD source only

Press **▶||** to play/pause

Press **POWER** button to alternate between standby and 'on' modes.

Volume +/-

To adjust the volume:

Press the **VOL+** button to increase the volume.

Press the **VOL-** button to decrease the volume.

Mute

To mute the audio:

Press the **MUTE** button to mute the audio. (Note: This will not mute the line-level audio output).

The HDTV will indicate that it is in a mute state.

Press the **MUTE** button to un-mute the audio.

Display

Press the **DISPLAY** button to preview the current program number, current input mode, or any relevant source information.

Press the **DISPLAY** button again to remove this information.

Power

To operate the HDTV:

Ensure you have connected the HDTV correctly and that power is supplied to the TV.

A **RED** LED indicates Standby Mode. A **GREEN** LED indicates the HDTV is ON.

Press the **POWER** button to power ON the television. The front LED will change from **RED** to **GREEN** to indicate that that HDTV has been turned ON.

Press the **POWER** button to power OFF the television. The front LED will change from **GREEN** to **RED** to indicate that that HDTV has been turned OFF.

Channel +/-

Press the **+** button to change the channel/chapter up.

Press the **-** button to change the channel/chapter down.

 
Numeric Keypad

To directly select a channel or chapter number:

Press the required number from 0-9 on the keypad. It will directly change to the chosen channel/chapter.

To select a 2-digit channel/chapter number, press the **-/-** button followed by the numbers you desire.

Remote Control

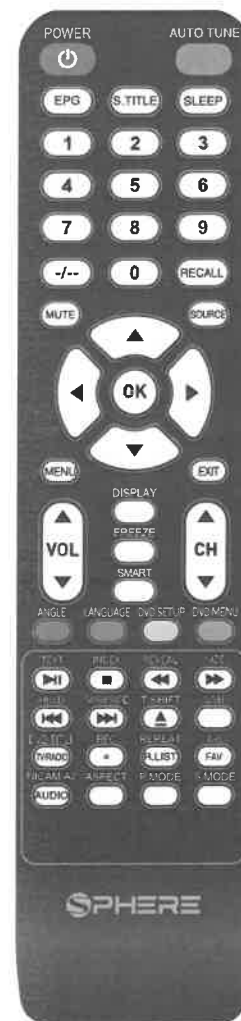

POWER: Switch between Standby and On.

AUTO TUNE: AUTO TUNE "DTV" ONE TOUCH TUNE.

EPG: Press to display EPG information. (Electronic Program Guide) (DTV only)

S.TITLE: Press to display subtitles on the screen or turn off the subtitles.

SLEEP: Set the TV to turn off after a specified time.

NUMBER BUTTONS: Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press enter to change immediately.

/: Swap between single, double, triple and quadruple digit input.

RECALL: Return to previously viewed program.

MUTE: Press to mute the audio. Press again or press VOL+ to resume.

SOURCE: Select the TV input source.

▲▼◀▶/OK: Allows you to navigate the on-screen menus and adjust the system settings to your preference.

MENU: Access the on-screen menu.

EXIT: Exit the menu or sub-menu.

VOL+/-: Press to increase or decrease volume.

DISPLAY: Press to display the current source and channel information.

FREEZE: Press to freeze current picture.

CH+/-: Press to change channel.

SMART: Press to enter Smart TV(HDMI) source.

ANGLE: Press to choose a different angle.(DVD)

LANGUAGE: Press to choose a different language.(DVD)

DVD SETUP: Press to display the DVD setup menu.

DVD MENU: Press to return back to previous DVD menu.

[Screen Icon]: Refer to the screen to see its function.

TEXT: Press to turn the Teletext on or off.

INDEX: Press to return to the index/initial page.

REVEAL: Reveal or hide the hidden words.

SIZE: Change the size of display in teletext mode.

HOLD: Press to hold on/off the current page display in Teletext mode.

S.PAGE: Display a sup-page of upper Teletext options.

T.SHIFT: Press to switch to time shift mode.

◀▶: Play fast backward/forward.

◀▶▶▶: Play previous/next media file.

▶||: Play/pause.

■: Stop playing.

▲: Eject the DVD source.

USB: Press to enter media source

DVD TITLE: Press to display DVD title information.

TV/RADIO: Press to switch between DTV and radio programs.

REC ●: Press to record the program immediately.

REPEAT: Press to select the repeat mode in USB / DVD mode.

R.LIST: Press to display the recorded list.

A-B: Repeat the segment between A and B.

FAV: Press to display favorite programs.

NICAM/A2/AUDIO: Cycles through LR/LL/RR sound modes in ATV/DTV/USB mode.

ASPECT: Select the screen aspect.

P.MODE: Select the picture mode.

S.MODE: Select the audio mode.

TV Operation

Turning On and Off

Connect the AC cord to power the TV. At this time the TV will enter standby mode and power indicator will turn white. Use Power button (⏻) on the side panel of TV or on the remote control to turn on the TV. After switching off the TV for 5 seconds, you can turn on TV again.

Select input source

Press INPUT button on remote control to display Source Select list.
Use ▲ / ▼ arrows to highlight the source you need and press OK to confirm.



Adjust the OSD Screen

The OSD (On Screen Display) menu enables you to navigate to the TV functions.
To use OSD menu system, press MENU button on remote control, then use ◀ / ▶ arrow to highlight an option from CHANNEL, PICTURE, SOUND, TIME, LOCK, SETUP and press OK / ▼ button.
Press the ▲ / ▼ arrow to move to a different option within each menu. If necessary, press OK or ▶ arrow to display the choices of the option you've highlighted. If available, use the text at the bottom of each screen for help. To return to the previous menu, press the MENU button.

- To exit the OSD menu:
- Press the EXIT button. The menu will clear from the screen.
 - Press the MENU button repeatedly until the menus disappear.

First Time Settings

Connect an RF cable from the TV's input called "AV-In" and to your TV Aerial socket
Language
select the language to be used for menus and message.

Country
Press ◀ / ▶ button to select the country you want to.

Press OK button to tuning setup menu, uses the arrows button select tune type.



Auto Tuning
First tuning digital, press Menu button to skip digital tuning, Second tuning analogue, press Menu button to skip analogue tuning.

 


CHANNEL menu


CHANNEL menu is used for channel searching and editing and is only available in TV input.
Press MENU on the remote. Select CHANNEL from the Main menu. Press the OK button to proceed to CHANNEL menu.



Auto Tuning
Use the up and down button to select Auto Tuning, then press enter button to enter sub-menu.

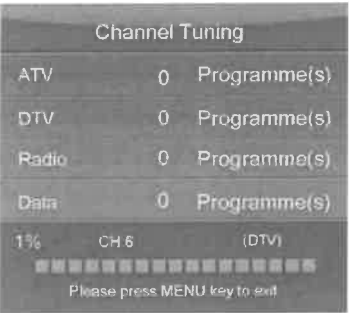

 - Channel tuning: search channel automatically.
You can stop searching with MENU button.

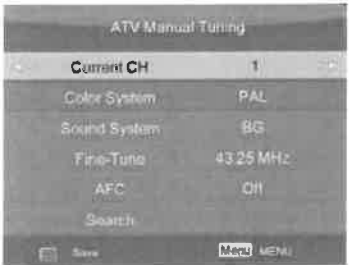

- ATV Manual tuning: search the channel manually.
You can customise the colour/sound system or the frequency of the channel.



- DTV Manual tuning: search the channel manually.
Use the arrow buttons to select DTV Manual tuning, the press the OK button to enter the sub menu

- **Programme Edit:** via colour buttons you can edit the programme. Functions include - delete, rename, skip channel etc. You can also add or erase channels on the favorite channels list via FAV button on the remote control.



- **Schedule List**
Show schedule list, is only available under DTV source.
- **Signal Information**
Press ▲/▼ button to select signal information, then press the OK button to see the detailed information about the signal. Only available when there is signal under DTV.
- **CI Information**
Press ▲/▼ button to select CI, and then press OK button to display the CI slot information.
- **Logical Channel Number**
Set the Logical Channel Number option to on or off.

PICTURE menu

Picture menu is used for picture effect adjusting.

Press MENU on the remote. Select PICTURE from the main menu. Press the OK button to proceed to picture menu.



- **Picture Mode:** select the preset picture mode. You can also switch the mode via PMODE button on the remote control. You can only customise the contrast, color, brightness and tint in Personal mode.
- **Brightness:** Adjusts the brightness of the picture, and usually is adjusted together with Contrast.
- **Contrast:** Adjusts the difference between the light and dark areas of the picture.
- **Sharpness:** Adjusts the sharpness of the picture. This function is not available in PC mode.
- **Colour:** Adjust the saturation of the colour based on your preference.
- **Tint:** Adjust the tint of TV display.
- **Colour Temp:** Press OK to enter the colour temp sub menu. Colour Temperature adjusts the colour temperature of the picture between Cold, Normal Warm.
- **Noise Reduction:** To filter out and reduces the image noise and improve picture quality.

SOUND menu

Sound menu is used for adjusting TV sound settings.

Press MENU on the remote. Select SOUND from the main menu. Press the OK button to proceed to sound menu.



- Sound Mode: Select the preset Sound Mode. You can also switch the mode via SMODE button on the remote control. Standard, Music, Movie, Sport and Personal five kinds of voice mode for your choice. Bass and Treble can only be adjusted when Sound mode is set to Personal.
- Bass: Adjusts the lowest part of the sound.
- Treble: Adjusts the highest part of the sound.
- Balance: Adjusts how much audio (loudness) gets sent to the left and right speakers.
- Auto Volume Level: This function may be set as On or Off. Auto Volume Level can set the volume to automatically adjust corresponding to the input audio.
- SPDIF Mode: Select between Auto, PCM and Off.
- AD Switch: Enter the AD Switch sub-menu, then select this option to adjust AD volume.

NOTE:

Balance: This adjusts the speaker output, and enables you adjust the sound balance to best suit your seating position. Auto volume level: This setting used for reducing the difference between channel and program's volume automatically. It adjusts the overall volume to be even. This function will also reduce the fluctuation of the sound.

TIME menu

Time menu is used for TV TIME adjusting.

Press MENU on the remote. Select TIME from the main menu. Press the OK button to proceed to time menu.



- Clock: Set the TV clock.
- Time Zone: Showing the country's time zone.
- Sleep Timer: Set the sleep timer. The TV will automatically enter standby mode after the selected time is up
- Auto Standby: Set the auto sleep On/Off, including Off, 3 hours, 4 hours and 5 hours.
- OSD Timer: Set the duration that the On Screen Display is active.

LOCK MENU

Lock menu is used to adjust TV Lock settings.

Press MENU on the remote. Select LOCK from the main menu. Press the OK button to proceed to lock menu.



- **Lock System** : Press OK button to enter, input password, default password is 0000.
- **Set Password**: To set your own password, first enter the old password, and then enter your new password twice.
- **Channel Lock**: To enter "Channel Lock " menu, select the program you want to, then press the "Green" button to lock or unlock the channel.
- **Parental Guidance**: You can set the parental control function to suit viewing for children of all ages. Choose the categories in the sub menu.
- **Key Lock**: You can set to lock or unlock the keypad.
- **Hotel Mode**



1. Press ▼/▲ button on the remote control to select hotel mode in the Lock menu.
2. Press Enter button on the remote control to enter the sub-menu.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu.

OPTION MENU

Option menu is used for additional options.

Press MENU on the remote. Select SETUP from the main menu. Press the OK button to proceed to setup menu.



- **Language** : Select your desired OSD language.
- **TT Language/Audio Language/Subtitle Language** : Select your desired teletext language/ the primary audio language /the primary subtitle language.
- **Hearing impaired**: This function is for the Hearing Impaired, when the status is on, you can see subtitles in the programs.
- **Blue Screen**: To turn the blue screen On/Off. If the blue screen function is turned on, the TV will display a Blue background when there is no signal input.
- **Environment**: To set environment mode, including home and shop mode.
- **HDMI CEC**: Used for CEC effect adjusting
- **PVR File System**: Enter the submenu to make PVR settings.

Media Operation

Note: Before accessing the Media Menu, plug in USB device or memory card.

Press ▲/▼ button to select MEDIA in the source menu, and then press "OK" button to enter. You can browse multimedia files by selecting PHOTO, MUSIC, MOVIE or TEXT. Then press the "▶" button to start playing.

1. Press ◀/▶ button to select the option that you want to adjust in the Media menu, then press OK button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ button to select.
3. After finishing your adjustment, press MENU button to save and return back to the previous menu and press EXIT button to exit the entire menu.


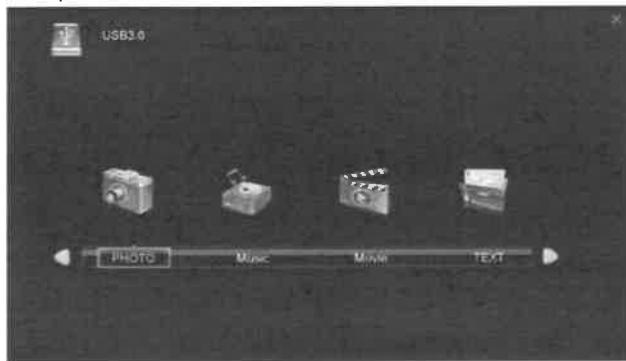 



Photo Menu

 1. Select PHOTO with the ◀/▶ buttons, and then press the OK button to enter sub menu.
2. Select C:\, then press the OK button to select the USB drive.
3. Select the specific photo, and press ▶ button to view, press the ◀ button to view the previous image, press the ▶ button to view the next image. A menu with further options will also be displayed where you can use the arrow key to make further selections.
4. Press the Exit button to exit.

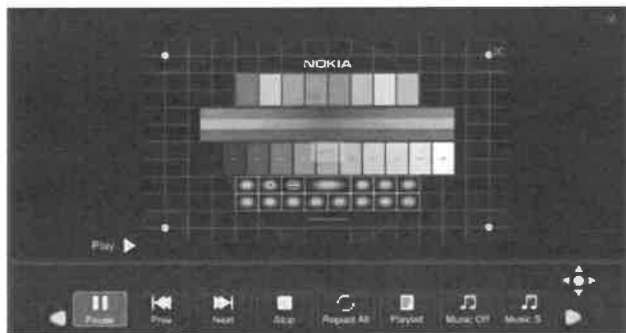

Music Menu

 1. Select MUSIC with the ◀/▶ buttons, and then press the OK button to enter sub menu.
2. Select C:\, then press the OK button to select the USB drive.
3. Using the arrow keys, select a specific song, and press the ▶ button to play, press the ◀ button to play the previous song, press the ▶ button to play the next song. Selecting particular songs with the "OK" button will form a playlist of songs you want to play. Not doing this will mean that all of the songs are played in order after your first selection.
4. Press the RED button to delete a selected song/track.
5. Press the Exit button to exit.

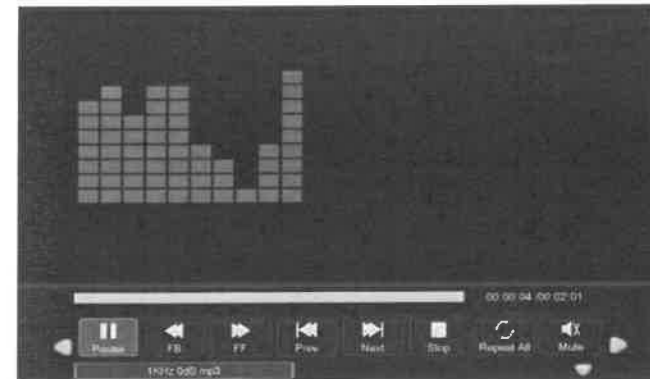

Movie Menu

1. Select MOVIE with the ◀/▶ buttons, and then press the OK button to enter sub menu.
2. Select C:\, then press the OK button to select the USB drive.
3. Highlight the specific video. When highlighted, the file information will be displayed and a preview of the video will start playing in the middle of the screen.
Press the ▶ button to start playback.
To view the play menu, press DISPLAY on the remote and the play menu will be displayed where you can select options such as repeating videos etc. Select ◀ to play the previous title, select ▶ to play the next title.
4. Press the Exit button to exit.



Text Menu


1. Select **TEXT** with the ◀ / ▶ buttons, and then press the **OK** button to enter sub menu.
2. Select **C:**, then press the **OK** button to select the USB drive.
3. Select the specific file, and press the ▶ button to play, press the ◀ button to play the previous file, press the ▶| button to play the next file.
4. Press the **RED** button to delete the selected file.
5. Press the **Exit** button to exit.




NOTE:

Please ensure you have an active Google account to use this device prior to setup.

 
WHAT'S INCLUDED

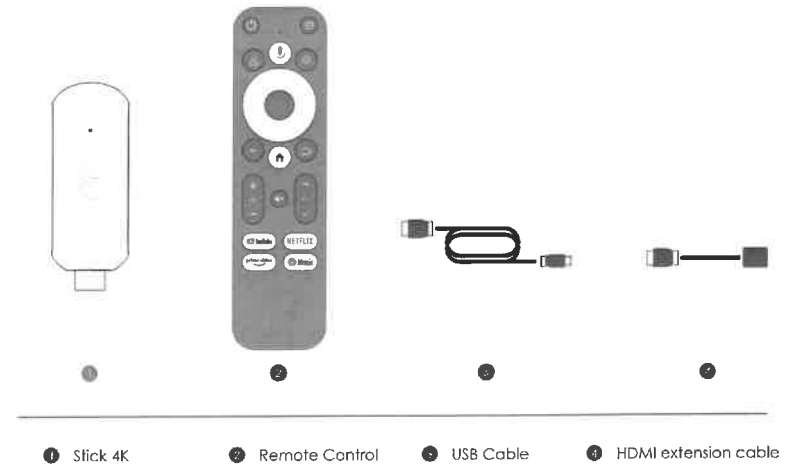


DEVICE INFORMATION

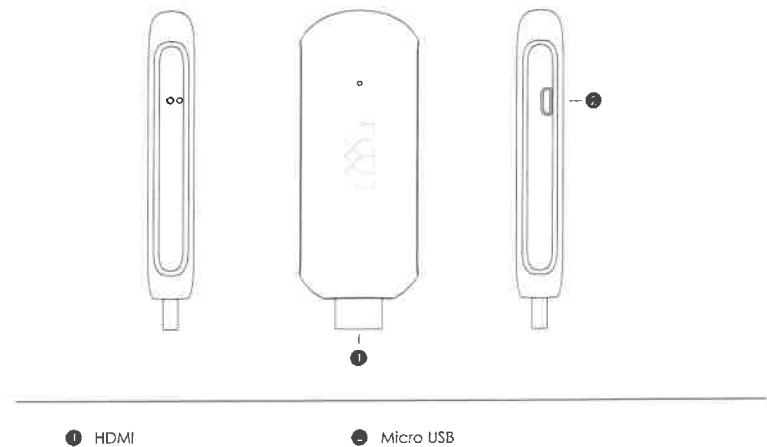 

SETUP DIAGRAM

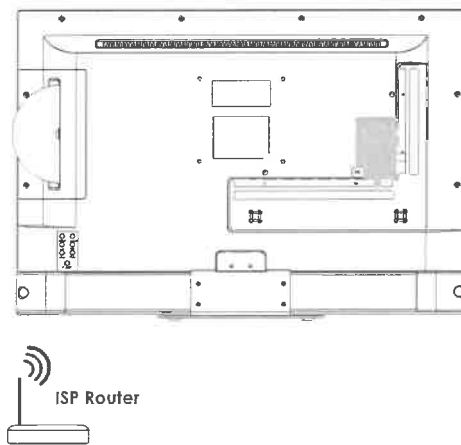 


REMOTE CONTROL

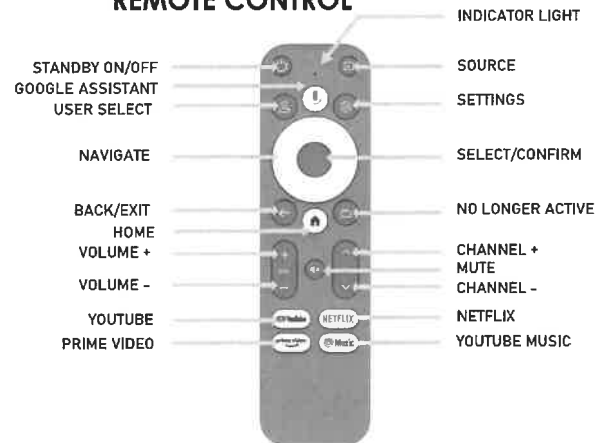 

Do more on your TV with your voice
Search for shows, get recommendations, even control your TV – faster – with your voice. Ask Google Assistant for a little help on your big screen.

 SETUP GUIDE

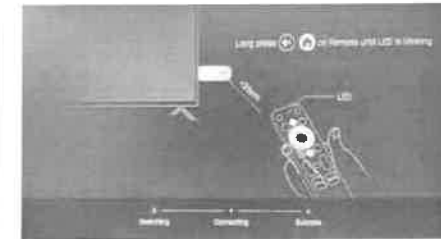

Remote Pairing Guide

Long press the Back and Home button at the same time until the red light flashes quickly, then release. This means the remote control has entered pairing mode. Wait for a few seconds without pressing any buttons until a message pops up on the screen that the remote has paired successfully.

COMMENCE SETUP

Choose your preferred method to setup the device.
Setup with Google Home App - or on TV

Follow the on-screen instructions using your remote to navigate through the setup process.



SPECIFICATION

Hardware	
Chipset	Amlogic S905Y4
RAM	2GB DDR
Flash	eMMC 32GB
Video	
Video Decoding	AV1 MP-10@L5.1 up to 4Kx2K@60fps Vp9 Profile-2 up to 4Kx2K@60fps H.265 HEVC MP-10@L5.1 up to 4Kx2K@60fps AVS2-P2 Profile up to 4Kx2K@60fps H.264 AVC HPL5.1 up to 4Kx2K@30fps MPEG-4 ASP@L5 up to 1080P@60fps(ISO-14496) WMV/VC-1 SP/MP/AP up to 1080P@60fps AVS-P16(AVS+)/AVS-P2 JiZhun Profile up to 1080P@60fps MPEG-2 MP/HL up to 1080P@60fps(ISO-13818) MPEG-1 MP/HL up to 1080P@60fps(ISO-11172) RealVideo 8/9/10 up to 1080P@60fps
Video File Format	Supports *.mkv *.wmv *.mpg *.mpeg *.dat *.avi *.mov *.iso *.mp4 *.rm and *.jpg file formats
Video Output	HDMI 2.1 , HDCP2.2
Aspect Ratio	Auto, Full screen
Power	
DC Input Range	5V 1A
Power Consumption	Maximum 5W

SAFETY INFORMATION



CAUTION!

NOTICE: To prevent fire and electric shock, do not expose this device to rain or moisture. In order to avoid any possible risk of electric shock, never attempt to open the unit. In case of the unit breaking down, repair of the unit should be carried out by qualified technicians. No part of this unit should be repaired by users.

WARNING!

- Place the device in a well-ventilated location to prevent accumulation of internal heat.

- Protect the device from high temperatures, humidity, water and dust.

- Do not place any objects that might damage your unit near it (e.g. liquid filled objects or candles).

DECLARATION

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube and YouTube Music are trademarks of Google LLC. Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



DVD

The DVD settings menu is accessed by the DVD SETUP button, use the up and down buttons to navigate the menu and the left/right buttons to changed items.

1. General Settings page



TV System

Select the color type as NTSC/PAL/AUTO

TV Type

Some DVDs have been authored in 4:3 aspect ratio format. To see the material in its original mode, you may need to change the Aspect Ratio.

Pan & Scan (4:3)

Black edges left and right will be seen.

Letterbox (4:3)

Top and bottom screen may be black.

Wide 16:9 (Widescreen)

Full width picture but may have black areas top and bottom.

OSD Language

Select the original OSD language (English is default).

Screen Saver

Starts the screen saver. The screen saver image appears when the player stops or the image is frozen for a few minutes. The screen saver can save the screen from damage.

2. Audio Setup



A. Press SETUP button on remote control during playing DVD, Press "► / ◀" until the following menu is displayed.

B. Press "▼/▲" to scroll through the items, then select the desired item with OK button. The selection is confirmed when the desired item becomes red.

C. Press SETUP to exit the menu.

D. There are four mode to choose: STEREO/MONO L/MONO R/MIX MONO.

3. Preference Setup



Audio

Please select the preferred language for DVD audio.

- 1) The selected language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
- 2) Languages vary between discs, depending on the DVD. You can also select alternative languages by pressing the AUDIO button on the remote

Subtitle

Selects the preferred language for subtitles recorded on Discs.

- 1) The selected subtitle language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
- 2) Subtitles vary between discs, depending on the Discs. You can also select alternative subtitle language by pressing the SUBTITLE button on the remote.

Password

Change the password to your desired password. The default password is 0000

Parental

It is possible to restrict playback of certain Discs to a certain level of user, based on their age, for example. Certain scenes can be blocked or replaced with different scenes. The "Parental Control" function lets you set the access control level. This function is password-protected.

Note: If you play discs that do not support the Parental Control function, the DVD player cannot restrict access to the disc.

Default

Restore the DVD player's system to factory default settings.

Troubleshooting

PROBLEM	SOLUTION
No picture or sound	Check the power supply is plugged in and turned on.
Picture is OK but no sound	Make sure the volume is not set to minimum or mute. Turn off the TV and turn back on.
Remote control doesn't work	Check the battery connection is correct. Check the batteries. Make sure no obstacles are between the sensor of the remote and TV
No TV Signal	Check the source is set to ATV or DTV. Check the antenna signal status.
No external video signal	Check the source is set to AV
Picture lacks colour or is too dark	Check colour, brightness and contrast settings
All channels lose colour intermittently	Check the antenna in case it is broken, disconnected or damaged.
Poor reception, loss of colour	Check channel is tuned correctly
Diagonal stripes on picture	Receiver may be affected by interference, e.g. nearby radio broadcasting transmitter or from another TV receiver.
Ghost images appear	Antenna direction may have been changed by a storm or strong wind. Ghost images are caused from both the signal travelling directly from the transmitter and a signal reflected from a hill or large building. Direction of the antenna should be chosen to avoid this situation.
USB media files don't work	FAT 32 formatted flash drive required. Reformat if required.
Time Shift and PVR don't work	FAT 32 formatted flash drive required. Reformat if required.



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The mains plug used as the disconnect device. The disconnect device shall remain readily operable.

WARNING: To reduce the risk of electric shock do not expose this apparatus to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

Important Safety Instructions

- 1. READ INSTRUCTIONS** - All the safety and operating instructions should be read before the unit is operated.
- 2. RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
- 3. HEED WARNINGS** - All warnings on the unit and in the operating instructions should be adhered to.
- 4. FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
- 5. CLEANING** - Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning the exterior cabinet only.
- 6. ATTACHMENTS** - The manufacturer of this unit does not make any recommendations for attachments, as they may cause hazards.
- 7. WATER AND MOISTURE** - Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- 8. ACCESSORIES** - Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

PORTABLE CART WARNING



9. VENTILATION - Slots and openings in the cabinet back or bottom are provided for ventilation, to ensure reliable operation of the unit and to protect it from overheating. These openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation, such as a bookcase, or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. POWER SOURCE - This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.

11. POLARIZATION - This unit is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

12. POWER-CORD PROTECTION - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. LIGHTNING - To protect your unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

14. POWER LINES - An outside antenna system should not be located in the vicinity of overhead power lines, or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

15. OVERLOADING - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

16. OBJECT AND LIQUID ENTRY - Do not push objects through any openings in this unit as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.

17. SERVICING - Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. DAMAGE REQUIRING SERVICE - Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the unit.
- If the unit has been exposed to rain or water.
- If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- If the unit has been dropped or the cabinet has been damaged.
- When the unit exhibits a distinct change in performance, this indicates a need for service.

19. REPLACEMENT PARTS - When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

20. SAFETY CHECK - Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

21. HEAT - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING: Do not leave any stationary images, patterns, PIP box, or letterbox images on the screen for an extended period of time. Also, do not display the same stationary patterns frequently. This may result in permanent ghost images on the display unit. This type of damage is not covered under warranty. Examples of this type of situation can be but not limited to the following: side bar images, stock market report bars, video game patterns, closed captioning, shopping channel logo, price display, and letterbox black bars. To prevent this type of damage, display constant moving images that fill the screen as often as possible.



Coast RV Pty Ltd
trading as Coast to Coast RV Services
ABN 49 097 104 492 - ACN 101 461 330
PO Box 6287, Silverwater NSW 1811
AUSTRALIA
Ph (02) 9645 7600 - Fax (02) 9645 7699
Email: warranty@coastrv.com.au
Web: www.coastrv.com.au

Coast to Coast RV Services
PO Box 58-054, Botany AUCKLAND 2163
NEW ZEALAND
Ph (09) 274 8700 - Fax (09) 274 8701
Email: enquiry@coastrv.co.nz
Web: www.coastrv.co.nz

Warranty Against Defects

1 WHAT THIS WARRANTY RELATES TO

- 1.1 This warranty covers goods supplied by Coast RV Pty Ltd T/A Coast to Coast RV Services ("Supplier") to the Client ("Goods") and relates to any defects in materials and workmanship under normal use and maintenance ("Defect").

2 WHAT THE SUPPLIER WILL DO TO HONOUR THE WARRANTY

- 2.1 The Supplier will:
- (i) replace or repair the Goods or the defective part of the Goods free of charge;
 - (ii) arrange for the Goods or the defective part of the Goods to be repaired or replaced by a qualified repairer free of charge.
- 2.2 The Supplier reserves the right to replace defective parts of the Goods with parts and components of similar quality, grade or composition where an identical part or component is not available.
- 2.3 Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

3 WHAT THE CLIENT MUST DO TO CLAIM THE WARRANTY

- 3.1 To claim the benefit of the warranty, the Client will need to (sequentially):
- (i) first contact the Supplier; and
 - (ii) present the defective Goods to the Supplier for inspection, including inspection for defective workmanship, or otherwise provide evidence of the claimed Defect, accompanied by evidence of proof of purchase and date of delivery, and if applicable, evidence of maintenance performed in accordance with the relevant maintenance schedules.
- 3.2 The claim listed in clause 3.1 may be made in person, or the claim may be sent to the address listed on this form, including the particulars required under clauses 3.1(i) and 3.1(ii).
- 3.3 The appropriate form for making a claim for warranty is as attached.

4 DURATION OF WARRANTY

- 4.1 This warranty will cease:
- (i) where the Goods are purchased already fitted in or as a component of a vehicle or RV: from the date that is twelve (12) months after the Client takes delivery of the vehicle or RV; and
 - (ii) where the Goods are purchased separately or as an after-market item: from the date that is twelve (12) months from the date of purchase..
- 4.2 If a Defect does not materialise in the Goods prior to the date provided in clause 4.1, the Supplier will have no liability to the Client under this warranty.

5 RESPONSIBILITY FOR COSTS OF CLAIM UNDER THIS WARRANTY

- 5.1 The Supplier is responsible for the costs directly associated with repairing or replacing the Goods in accordance with clause 2.1 only.
- 5.2 Any works required to be completed in addition to fixing the Defect are the responsibility of the Client. Additional works includes any costs associated with any testing or repair of the Goods or any goods to which they are fitted, undertaken by a third party in relation to any defect without prior authorisation from the Supplier.
- 5.3 Where it is determined that the Goods do not have a Defect, the Client will be charged a GST exclusive inspection fee of forty-five dollars (\$45.00AUD in Australia or \$45.00NZD in New Zealand) plus freight costs for the return of the Goods, this is subject to change without notice.
- 5.4 The cost of delivery and insurance of the Goods to and from the Supplier, travel costs to and from the Supplier, and the cost of inspecting and testing the Goods are the sole responsibility of the Client.

6 WARRANTY LIMITATIONS

- 6.1 The Supplier makes no warranties or representations other than those set out in this warranty document except as is required by law.
- 6.2 The Supplier will not be liable under this warranty:-
- (i) to the Client or any other person for any consequential, direct or indirect loss, damage or costs incurred or suffered by the Client or any other person, including but not limited to damage to persons, other property, loss of turnover, loss of profits, loss of business or goodwill;
 - (ii) to the Client for transportation or travel costs which are the Client's responsibility;
 - (iii) for damage or defects in any Goods caused by improper transportation, storage or any other misuse, neglect or accident.
 - (iv) for the installation of the Goods. Any fault or defect due to installation should be referred to the installer. The Goods must be installed in accordance with the Manufacturer's instructions and any relevant legislation or code.
- 6.3 This warranty covers the Client only and it is not transferrable if the Goods are sold by the Client during the warranty period.

7 WARRANTY EXCLUSIONS

- 7.1 This warranty will not apply where:
- (i) the Goods have been improperly modified or repaired or the Good's defect has arisen due to the Client's failure to properly install, fit, maintain, service or use the Goods in accordance with the specifications and instructions provided by the Manufacturer, including a failure to comply with the relevant maintenance schedule (where applicable);
 - (ii) the Supplier cannot establish any Defect in the Goods after testing;
 - (iii) the Goods have been used other than for the purpose for which they were designed;
 - (iv) the Goods have been subject to abnormal conditions, including but not limited to temperature, pressure, stress, load or similar;
 - (v) the Client or installer have used or fitted non-genuine or non-approved parts and accessories to the Goods or have failed to use recommended parts and accessories;
 - (vi) the Good's defect has arisen due to abuse, misuse, neglect or accident;
 - (vii) the Goods have not been installed in accordance with the relevant instructions;
 - (viii) the Good's defect is caused by use or fair wear and tear of the Goods (or expendable parts).

8 RIGHTS AT LAW

- 8.1 The benefits given to the Client under this warranty are in addition to other rights and remedies of the Client at law in relation to the Goods.
- 8.2 In Australia our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the Goods fail to be of acceptable quality and the failure does not amount to a major failure.

WARRANTY CLAIM FORM

Warranty Providers Name: Coast RV Pty Ltd trading as Coast to Coast RV Services
ABN 49 097 104 492 - ACN 101 461 330
Warranty Providers Address: PO Box 6287, Silverwater NSW 1811 Australia OR;
PO Box 58-054 Botany AUCKLAND 2163 New Zealand

Client:

Contact No.

Description of Goods provided:

Receipt enclosed: *(tick box)* ☐ Yes ☐ No

Receipt No:

Description of defects (Give as much detail as possible. Use a separate page if required):

Date of purchase/services provided:

I hereby declare that the information provided above is true and correct and to the best of my knowledge and belief and I have complied with all the conditions of the warranty.

Signed:

Name:
(please print)

Dated:

[Please note, the issue or completion of this form by the Client does not constitute an admission of liability by the Supplier]