



User Manual

MODEL: FLW25
CODE: 700-00366



Contents

Safety precautions	2
Washing machine components.....	4
Installing the washing machine.....	5
Removing the shipping bolts.....	5
Adjusting the leveling leg.....	6
Fixing the cover bottom and guide-leg	7
Connecting the hose-water(in).....	8
Connecting the drain hose.....	9
Installation requirements.....	10
Control panel and program description.....	13
Using detergents and additives	17
Cleaning the washer drum	18
Cleaning the water supply valve filter	19
Cleaning the washer enclosure.....	20
Storing the washing machine	21
Troubleshooting.....	22
Product specifications	25
Program control board.....	26

Safety precautions

Important Safety Symbols and Precautions. Please read this manual carefully before using this product. Please read the user manual carefully and perform all installations, maintenance and operation of this machine with caution and care. Proper operation, handling, usage and care for this product will help make the most of the functions of the product and extend the service life of the machine. We are not liable for any damages resulting from improper use.

Meanings of icons and symbols in this manual:



CAUTION: Hazards or unsafe practices that may result in personal injury or property damage.



ATTENTION: To reduce the risk of fire, explosion or personal injury when using your washing machine, follow these basic safety precautions.



WARNING: Hazards or unsafe practices that may result in severe personal injury, death or property damage.

Risk of fire

- Do not wash or soak any clothing stained with gasoline or other flammable, explosive and toxic solvents, as the clothing aforesaid may release flammable substance that may cause fire or explosion. Wash the clothing aforesaid manually first, and ensure that all potentially flammable liquid, solid and particle traces are removed before putting it into the washing machine. Hazardous substances include acetone, alcohol, gasoline, kerosene, certain liquid household cleanser and detergent, turpentine, wax and wax remover.
- Do not use strong acid cleanser in the washer.
- Do not put gasoline, alcohol, dry cleanser or other flammable and explosive substances into the washing machine as detergent.
- Do not overload the wall power socket or the extension cord. Overloading of power wall socket may cause fire and electric shock.
- Never use this product together with other heating equipment at the same time.

Risks associated to placement and location of product

- Keep children (or pets) away from playing with or in the washing machine; as this may result in serious injury.
- Install the washing machine in a dry and ventilated room; avoid locations such as bathroom or a wet room.
- Position the washing machine on a hard, flat and clean surface without any water or oil.
- Never stack washing machine on top of other washing machines or appliances.
- Washing machine must be installed with proper levelling to avoid equipment damage. Use the levelling feet to adjust and make sure product is properly leveled (e.g. in recreational vehicles, caravan and trailers).

Safety precautions

Risks associated to placement and location of product (continued...)

- This appliance is not intended for use by any children, persons with physical, sensory or mental disability and by any persons with inadequate knowledge of operating an appliance such as this washer product; unless been adequately supervised or guided by a responsible person and understand the potential hazards to ensure that they can use the appliance safely.
- The appliance is not intended to be used in places that are subjected to high level of vibration that may disrupt or prevent it from operating normally.
- Re-levelling of appliances is recommended if equipment has been subjected to a high vibration condition.

Risk of scalding




- The water supply hoses may degrade over time. Periodically check and inspect the washing machine for any potential expansion, kink, breakage, wear or tear that may result in leaks on the hoses. Replace any leaking hose promptly if there are any leaks detected.
- As hot water supply may be used on this machine in one of the washing programs, there may be risk of scalding due to hot water leakage if hoses are worn or torn. Keep children away from the product;
- In case of gas leak, ventilate the room immediately and do not touch the power plug.

Risk of electrocution

- Please unplug the washing machine before performing maintenance, cleaning or repair. Repairs MUST only be carried out by qualified and experienced service personnel. Repairs made by unqualified and inexperienced personnel may lead to further damage to the washing machine and may result in personal injury.
- Always unplug the washing machine and turn off the water supply faucet after use.
- Never bend the power cord by force or place heavy objects on the power cord;
- Never touch the power cord with wet hand;
- Never overload a power outlet by connecting too many electrical appliances on the power outlet to avoid overloading;
- Always ensure carpet does not obstruct ventilation openings in the base of washer.
- Never install the washing machine close to other electrical appliances; never place a candle or cigarette on the washing machine;
- Never approach the washing machine soaked in water, otherwise an electric shock may occur;
- Please use a dedicated approved Australian wall type AC power outlet of 220V-240V/50Hz and not less than 10A, installed by a licensed electrician;
- The specification of the power plug shall comply with the requirements of electricity load current. Use the 220V-240V AC power supply alone with reliable grounding.

Parts of the washing machine

Common part names and positions of the mini drum washing machine.

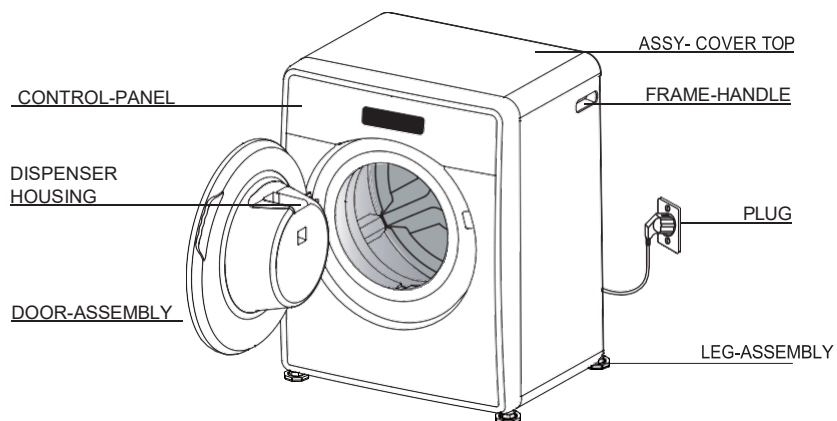


Included accessories

SPANNER (1)	HOSE-WATER(IN) (1)	MANUAL-BOOK (1)	HOSE-DRAIN LINK (1)
GUIDE-LEG (4)	COVER BOTTOM (1)	COVER (3)	


Installing the washing machine

Removing the shipping bolts


Three shipping bolts on the back of the machine must be dismantled before using the washing machine.

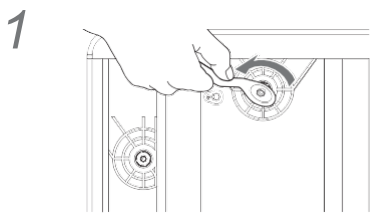


Loosen all bolts with the spanner.

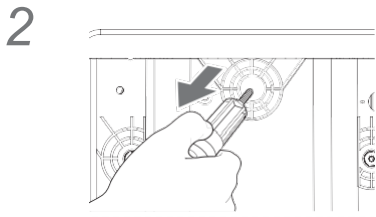

Take each bolt head and pull it out from the loose hole.

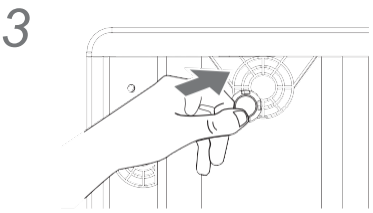

Fill the holes with the supplied plastic covers.

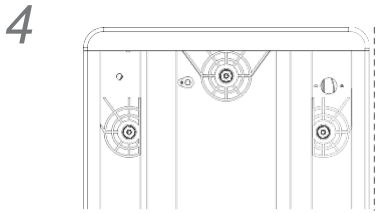

Store removed transport bolts for future use.

! Packing materials can be dangerous to children; keep all packing materials well out of the reach of children.

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance must not be carried out by children without supervision.
- Children of less than 3 years should be kept away from the washing machine unless continuously supervised.


Installing the washing machine

Adjusting the leveling leg



- If the floor is uneven, adjust the leveling leg of the washing machine (do not insert pieces of wood or any other objects under the leg)
- When tightening the leg bolt with the spanner during adjustments, avoid movement of the leg.


1

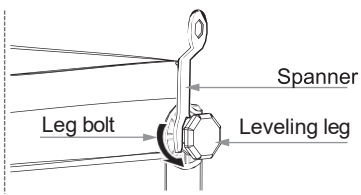

Turn left to loosen the leg bolt with the wrench.


2

Adjust the leg higher

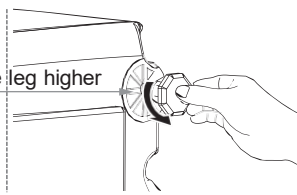


Adjust the leveling leg until it is at the desired height, turn anticlockwise to increase height, and turn clockwise to lower.

3

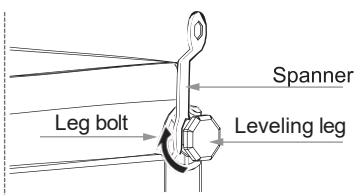

Tighten the feet with a wrench, repeat on all four levelling legs.

4

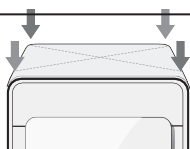


Ensure the machine is level to avoid vibration and potential damage.

Press on diagonal corners and check if there is any rocking or excessive movement. If necessary repeat the process until machine is level and stable.

Installing the washing machine


Fixing the bottom cover and guide-leg

1

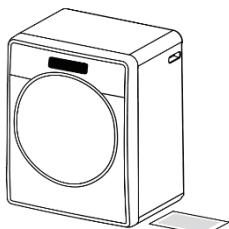


Lay the machine on its side to prepare for installation of the bottom cover.

2

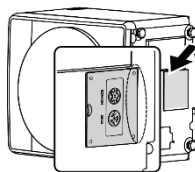


Align one side of the bottom cover and insert it into the groove.

3

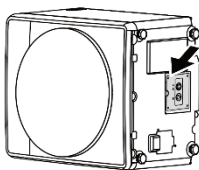


Clip four bayonets of the bottom cover into the groove, and press the whole bottom plate into the groove.

4

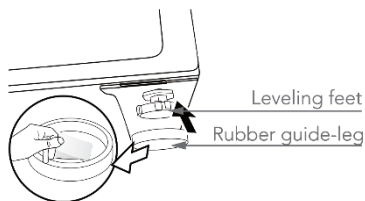


Tear off the internal adhesive paper of rubber guide-leg and stick it on the leveling feet of machine;

5

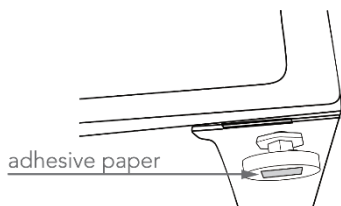

Tear off the external adhesive paper, and put down the machine slowly to make the guide-leg stick to the ground.

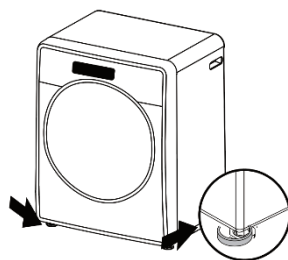


- After sticking the adhesive pads, gently put down the machine body to make the four guide-legs fully stick to the ground.

Installing the washing machine

Connecting the hose-water(in)

- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.

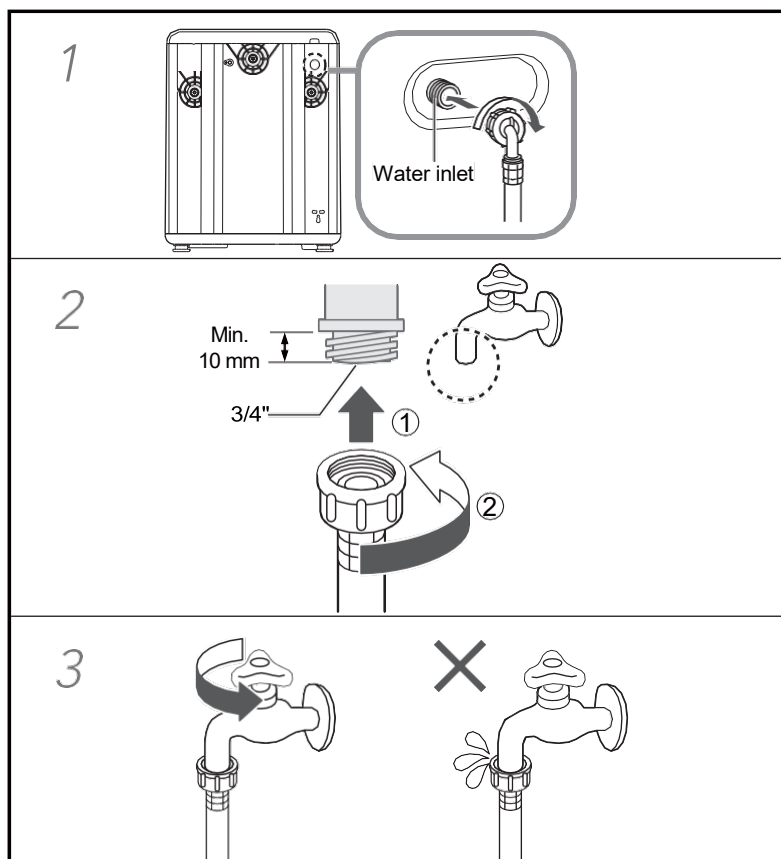

- After installation, turn on the water tap to check for any leakage. The instruction for appliances connected to the water mains by detachable hose-sets supplied with the appliance are to be used, and old hose-sets should not be reused.
- Unplug the appliance and turn off the water tap after use.
- The new hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.

Installing the washing machine

Connecting the drain hose

The end of the drain hose can be installed in three ways.

1. In a floor drain directly

We recommend that you use the drain hose attached to the appliance; it can be directly inserted into the floor drain with the width of the trough entry not less than 4cm.


2. In a sink hose drain branch.

The end of the hose drain is connected to a sink hose drain branch. If the hose is too long it cannot be forced into the washing machine, otherwise abnormal noise may occur. Note: the width of the sink entry shall not be less than 4cm.

3. Over the edge of a wash basin.

The end of the drain hose must be placed at a height of between 50 and 90 cm from the ground. To avoid restricting the water flow due to the bending of the drain hose, secure the hose over the edge of the wash basin with a hook to prevent the hose from moving.

Note: the end of the drain hose cannot be submerged in water.

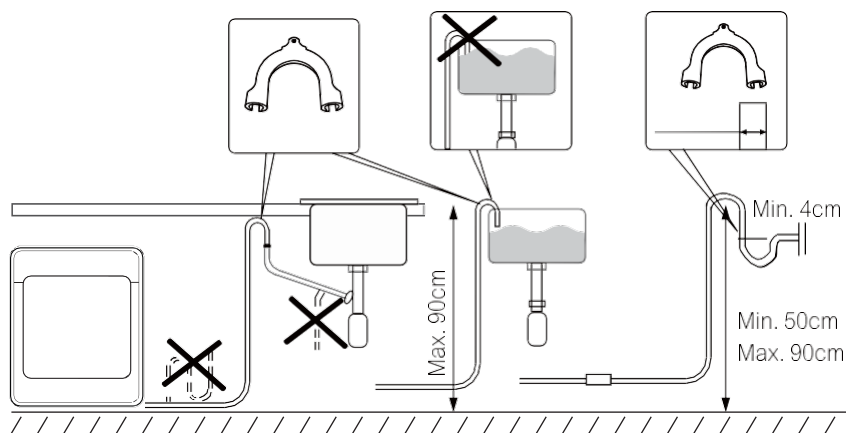

Installation requirements

Note: All electrical circuit and grounding must be set as per the national electrical standard.

Power supply

- To avoid the unnecessary risk of fire, electric shock or personal injury, all electrical circuit and grounding must be set as per the national electrical standard. It is the owner's responsibility to provide proper maintenance on the electrical appliance.
- Do not overload the wall power socket or the extension cord. Otherwise, it may cause fire and electric shock.
- Only the power cord equipped with the washing machine can be used.
- When ready for installation, ensure the power supply complies with the following items: Fuse or breaker of 220V-240V, 50Hz, 10A. When the heating function is used, the maximum current of the washing machine may reach 10A. Ensure that your power supply unit (current, voltage and cable) can meet the normal load requirements of the appliance. Use the State Grid. If you are not sure about the voltage, contact with the manufacturer, product and service agent or qualified person.
- To guarantee your safety, use the three-core socket and check to ensure it is grounded accurately and reliably. (The washing machine has been equipped with a three-core socket.)
- Protect the power cord.
- The power cord has to be positioned so that it will not be stepped on, pressed or clamped by the article on or next to it. Pay special attention to the power cord of plug, socket and power cord contact of the appliance.


Water supply

- The working water pressure of the washing machine is 0.05MPa~0.8MPa. When the water pressure is below 0.05MPa, the water supply valve may not work normally, or the time of water supply is longer than that of program control, and the display screen shows "SF".
- The water supply faucet must be less than 122cm away from the rear of the washing machine so that the water supply hose can be easily connected to the washing machine and the water faucet.
- To prevent the risk of water leakage and water damage, consider the following:
 - Ensure water tap is at a reasonable position for easy connection.
 - Turn off the water faucet when the washing machine is not used.
 - Check water leakage conditions of the internal loop regularly.

Installation requirements

Grounding

- The instructions for appliances incorporating a functional earth, states that the appliance incorporates an earth connection for functional purposes only.
- The washing machine must be grounded. If the washing machine has a fault or cannot run normally, the current can be conducted to the ground, minimizing the risk of electric shock.
- The ground wire cannot be connected to the plastic pipe, gas conduit or hot-water pipeline. If the ground wire is connected to the improper ground conductor, electric shock may occur.
- If you are not sure whether the washing machine is grounded correctly, check with the manufacturer, product and service agent, or a qualified installer for verification.
- If the power supply cord is damaged, it must be replaced by the manufacturer, service agent or a qualified electrician in order to avoid electrical hazards. The plug attached to the washing machine cannot be transformed with an adaptor. If the plug cannot match the socket, an approved one should be installed by a qualified person.

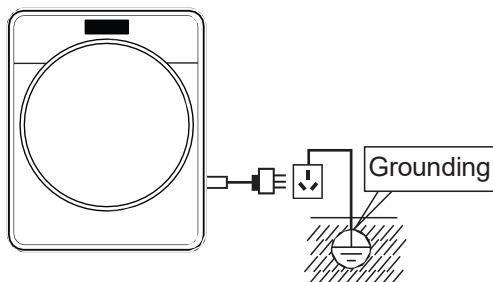

Ground location

To minimize the vibration or unbalanced load, the wood floor has to be reinforced. The carpet and the soft floor tile surface may cause vibration and slight movement of the washing machine in operation.


Before you install the washing machine, select a location with the following characteristics:

- Do not position the washing machine on a platform or a structure with weak support.
- A hard, level surface (if the surface is uneven, see “Adjusting the leveling leg”).

Installation requirements

Installation location


- Avoid direct sunlight. Install in an area with adequate ventilation. (The washing machine should not be installed in a bathroom or a wet room.)
- Room temperature should not fall below 0 °C.
- Install away from sources of heat such as heater or gas stove.

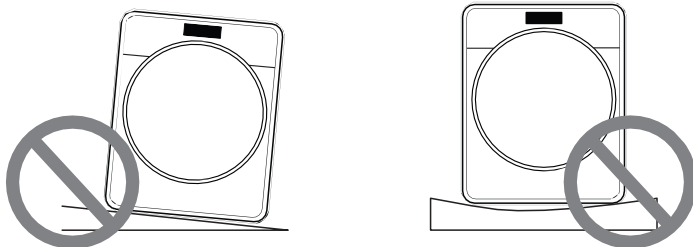

Make sure that the washing machine does not stand on its power cord. Ventilation openings must not be obstructed by carpet when the washing machine is installed on a carpeted floor.

Control panel and program description

Control panel and program description facilitate easy operation of the drum washing machine.

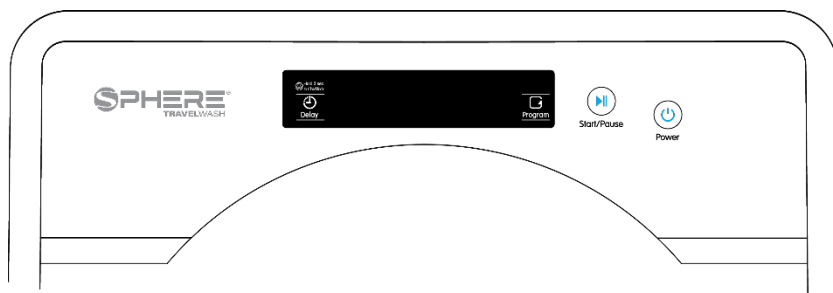

Start/Pause

Press this button to start/pause the operation of the machine; to change washing program, press this button to pause, then press the selected program button to start.



Power button

Turn on/ off the washing machine using this button. If the washing machine is kept unused for 10 minutes after power on, the power supply will be shut off automatically.



Delay button

Press the button repeatedly to cycle through the available preset options (from 3 hour to 19 hours in one hour increments). The washing cycle will complete the selected program after the set delay hours.



Program button

Press this program button to select one from six optional programs. (Cotton | Quick Wash | Soft | Hi-Temp | Spin | Drum clean)



Door lock

The door lock status indicator, indicates whether the door can be safely opened or not. Door must not be opened when the indicator is solid ON or blinking. Door can be opened when the indicator light is OFF.



Child Lock

This function can lock all buttons excluding the Power button so that the selected washing program will not be changed due to children's misoperation resulting in the operational failure of the washing program.



Display module

Display the remaining time for finishing washing; error message is displayed if the washing machine breaks down, in order to take appropriate countermeasures.

Control panel and program description



Cotton

Suitable for washing cotton or linen cloth, such as bed sheet, table cloth, underwear, towels, shirts. The Cotton program is for a normally soiled cotton load at rated capacity. Cotton is the recommended washing program for most circumstances.



Quick Wash

Suitable for washing slightly soiled laundry that is worn only once, or only needs a light wash cycle.



Soft

Suitable for washing generally or slightly soiled cotton textiles, linen bed sheet, linen table cloth, underwear, towels, shirts, etc.



High-Temp

High temperature washing with an additional rinse that will be carried out to ensure children clothing or underclothes are free of residual washing detergent.



Spin

Performs the spin cycle only, and spin dries excess water from clothes and laundry.



Drum clean

This program is designed to clean the inner drum of the washing machine, to keep it sanitary (no clothing should be added when this program is used)

High-Temp

Eradicating invisible residual bacteria, ensuring comprehensive laundry hygiene.

Application method of Hi-Temp function.

1. Put clothing into the washing drum and add a proper amount of detergent, then close the door;
2. Press the power supply button  ;
3. Press the "Program" button to select high temp program;
4. Press the "start/pause" button  to begin wash.



In order to enhance the washing effect, detergent and bleach may be added into the washing drum before adding clothing.

Control panel and program description

Inspection before carrying out Hi-Temp program

A. Check the classified washing of clothing

- a. Carry out classification based on color and level of dirtiness of clothing (for instance, heavily soiled clothing, unfaded clothing, white clothing, soft clothing etc.).
- b. Fasten all attached articles of the clothing and empty the pockets; if there are any damaged parts on the clothing, please repair before washing.



- Never Hi-Temp wash the clothing which may fade;
- Never Hi-Temp soft clothing, such as wool product or ladies underwear etc;

B. Check the cover of machine door

- a. Check if machine door is properly closed;
- b. If clothing is clamped by the cover of machine door during wash, the clothing may be torn or leakage may occur. Please ensure machine door is closed and clothing is not clamped.

Hi-Temp (boiling) wash program precautions



- Please use a dedicated wall type AC power outlet of 220V-240V/50Hz and 10A;
- Never use power extension line;
- Adopting other supply voltage or current may result in fire, electric shock or power failure;
- Never use this product together with other heating equipment at the same time;
- The temperature of Hi-Temp (boiling) program may be different due to environment;
- The internal temperature may be very high in the wash program, so operate carefully to avoid scalding.
- Time required to complete sterilization by program is based on water inlet temperature, the lower water inlet temperature is, the longer the time required will be;
- With specific design for the washing machine, only cold water will be supplied to cool the hot water after the boiling wash program;
- Boiling wash program can be kept on only after the machine door is closed;

Control panel and program description

Delay

Press the button repeatedly to cycle through the available preset delay options (from 3 hour to 19 hours in one hour increments). The selected washing cycle will be completed by the delay time selected.

Setting method of the delay time:

1. Select a washing program according to the type of clothes you are washing.
2. Press the "Delay" button repeatedly to select your desired delay time.
Press the button for the first time, displaying "3:00" (3hrs) and the time can be set to "19:00" (19hrs) at most in one hour increments. Continued pressing, will advance the time automatically.
3. Press the Start / Pause button. The clock will begin counting down until it reaches your finish time. Eg. If the preset time is set to 6 hours, the selected wash program will be finished completely by 6 hours.

Cancellation method: press the Power button, this function will be inactivated.

Note: the delay time can be 3 to 19 hours, not less than 3 hours.

The delay function is unsuitable for clothes that produce static electricity.

The delay function is not available for Drum clean program.

Set the delay time at first, then press the "Start / Pause" button to display the remaining time.

Child Lock

Child-Lock function can prevent accidental washing process due to children's unintentional operation.

Setting method of the child lock:

This function will be activated when pressing the "delay" button and holding down for 3 seconds. Meanwhile, the  indicator light on.

Cancellation method: press and hold the delay button for 3 seconds to cancel this feature.


Note: If you need to change the wash program, cancel "child-lock" function then change, and press "start/pause".

Using detergents and additives

Please ensure the cap-drawer is placed in the correct position, and cannot be dislodged during the wash cycle.

Cap-drawer

Addition level of laundry liquid should not exceed MAX base line marked on the cap-drawer. Laundry power or laundry beads should be added into drum directly.

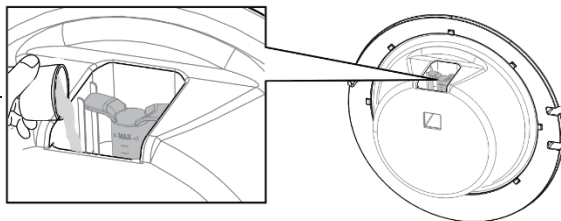

Precautions for using detergent



A. Determine the amount of laundry liquid

The amount of detergent is based on the water hardness in your area and the detergent manufacturer's recommendations on the package as well as the weight of laundry, the type of fabric, the degree of soiling etc.

B. Selecting proper laundry liquid

The type of detergent you should use is based on the type of fabric (cotton, delicate items, chemical fiber and wool), color, wash temperature, degree and type of soiling. Always use "low foam" washing powder, which is designed for drum washing machine.

 
- Keep detergents and additives in a safe, dry place out of the reach of children.
- Please use appropriate amount of detergent according to the type of fabric and the degree of soiling for the sake of environmental protection.
- Appropriate amount of detergent shall be used according to the weight of laundry, the degree of soiling and product description.

Drum clean

This is an auto drum cleaning program that is designed to remove the potential for mold growth that may be present in the drum.

How to program drum cleaning function

- A. Turn on the water supply tap.
- B. Press the Power button  to start the washing machine.
- C. Press the Program button to select the “Drum clean” program.
- D. Press Start/Pause button  to start the drum cleaning program.



 Never add clothing into the drum if performing the drum cleaning program.

Precuations for using rum cleaning function




Be sure to use specialised cleansers to clean the inner drum.

- The drum can be cleaned without cleansers in the Drum clean program.
- The Drum clean program cannot be used when there are clothes or laundry in the washing machine, or machine may be damaged.
- Minimal drum cleanser should be used for the sake of environmental protection.
- Bleach containing chlorine may fade the laundry; be sure to use oxygen bleach only.
- There are powder and liquid cleansers available to clean the drum.
- Powder cleanser: Please use powdered bleach or specialised cleanser designed for the inner drum of washing machines.
- Liquid cleanser: Please use liquid oxygen bleach or specialised cleanser designed for the inner drum of washing machines.
- Never use foam type detergent.

Cleaning the water supply valve filter


You should clean the supply valve filter at least 3 to 4 times per year, or when you see "SF" error message on the display:

1

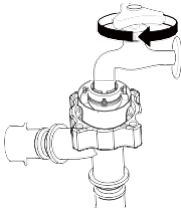


Pull out the power plug and turn off the water supply faucet of the washing machine.

2

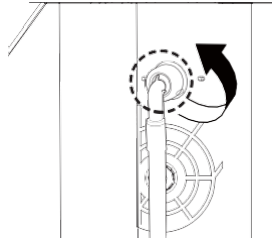


Unscrew the water supply hose from the back of the machine.

3

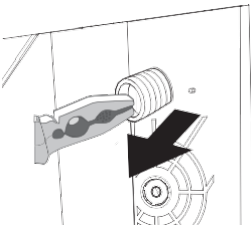


With a pair of pliers, gently pull out the water supply valve filter and rinse it under water until clean.

4

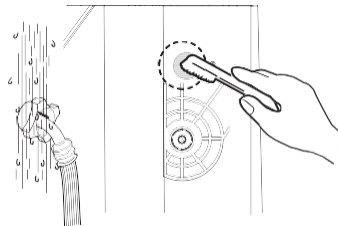


Clean the inside and outside of the threaded connector with a toothbrush or other soft bristle brush.

5

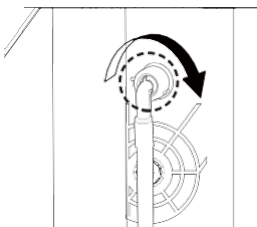

Push the filter back into the original place. Reconnect the water supply hose.

6

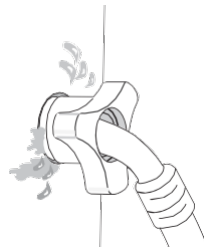

Turn on the faucet and make sure the connections are watertight.

Cleaning the water supply valve filter

- **Rust:** Rusting may occur if water source with rust or rusty article (such as hair pin), is put into the drum, or if water has been left in the drum for too long.

- **Rust cleaning:** Squeeze out the rust removing paste on a soft cloth or sponge, and then wipe the rusty parts.


※ Never use a steel brush, otherwise the drum will be damaged.

- **Residual detergent:** (Dark color and stain) After long service of the washing machine, if excessive detergent is added, or cleaning program is repeated with detergent not dissolved completely, clothing may be contaminated by residual detergent.

Cleaning the enclosure


Clean the housing of washing the machine regularly to keep it clean and sanitary

1

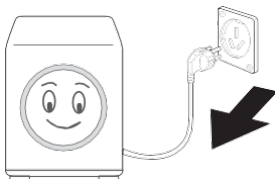


1. Unplug the washing machine before cleaning, otherwise electric shock or personal injury may occur.

2

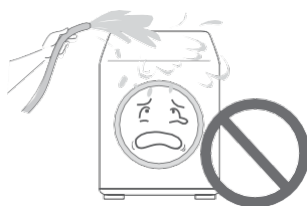


2. Never spill water on the washing machine, otherwise short circuit or electric shock may occur.

3

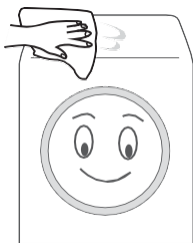

3. Use a soft damp cloth to clean the washing machine.

4

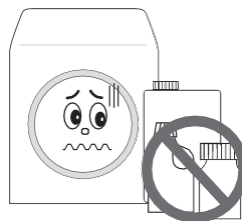

4. Never use synthetic detergent, benzene contained detergent or diluents.

Cleaning the enclosure

Precautions for cleaning housing of the washing machine


- Wipe the washing machine enclosure, including the control panel, with a soft cloth and nonabrasive household detergents.
- Use a soft cloth to dry the enclosure.
- Do not pour water on the enclosure, as non-water-resistant parts of the machine may get damaged.

Storing the washing machine


Drain the residual water out of the machine; otherwise the washing machine may be damaged.



1. Select the Spin program to drain the water out with the fastest speed.

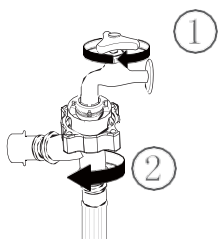

2. Turn off the water faucet and separate the water supply hose.

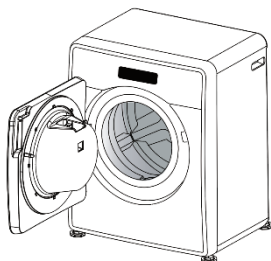

3. Unplug the washing machine and open the machine door to allow ventilation.

Troubleshooting

Problems and solutions

Problem	Solution
Detergent remains in the detergent drawer after the washing is complete	• Check if the water pressure is sufficient when washing. • Check if the washing powder is damp and caking.
Washing machine vibrates or is too noisy	• Check if the washing machine is set on an uneven surface. If the surface is uneven, adjust the leveling leg to level the appliance. • Check if the shipping bolts are removed. • Check if the washing machine is touching any other objects. • Check if the laundry load is balanced in the inner drum of the washing machine.
The displayed washing time deviates from the actual washing time	• There is deviation in the weight of laundry, watery supply time and balancing time.
The drainage pump has abnormal noise	• Check if the drainage pump filter is blocked by laundry flocks and clean the debris.
Foam overflows from the air return hole on the back of washing machine	• Too much washing powder, so reduce its amount; • Pour the washing powder into the drum directly; • Use low foam washing powder or liquid detergent dedicated for drum.

Troubleshooting

Error messages description

Error code	Code description	Solution
df	Abnormal door lock	● Check if the door is opened and make sure the door is closed firmly. ● Check if the wiring harness of the computer board was accidentally disconnected. ● Check if the plug wire of door switch is loose or has a poor contact.
SF	Abnormal water supply	● Check if the water supply tap is turned on. ● Check that the water supply valve filter is not blocked. ● Check the water pressure. ● Check if the drain valve is blocked.
_F	Abnormal draining	● Clean the drain valve. ● Check if the drain hose is properly installed. ● Check if the hose drain is blocked.
LF	Extreme low water level with standard watering times	● Check if the drain valve is blocked. ● Check if the water pressure is normal. ● Check if there is water leakage.
UF	Imbalance alarm	● Excessive tangling or twisting of clothing. Remove and untangle laundry before placing back into the machine. ● Increase the quantity of clothing to be washed. ● Check if the washing machine feet are level and adjusted.
CF	Abnormal communication between computer board and frequency conversion board	● Power off the machine to check if the wire connecting the motor and the electric reactor is connected. ● Check if the patch cord of the motor and cables was accidentally disconnected. ● Check if the PCB board wirings have been dislodged.
XO	Excess water temperature for above 5 seconds	● At this time, keep children away from the washing machine and restart it. ● Unplug the power cord, allow to cool down. Plug in and restart.

Troubleshooting

Error messages description

Error code	Code description	Solution
E ₁ F	Temperature sensor abnormality	● Check if the NTC plug wire is in poor contact. ● Test the resistance of temperature sensor in cold state with the multimeter and check if it is above 1.5MΩ. ● Check if the wire and plug-in between the temperature sensor and the computer board are in poor contact.
F ₁ F	Water level too high	● Check flexible pipes of the pressure switch for kinks or tangles. Untangle then test-run the machine. ● Check if there is something wrong with the drainage pump. ● Check if the hose of pressure switch is clogged.
H ₁ U ₁ U ₂	Abnormal voltage	● Power supply voltage is unstable. ● Program will run automatically after the voltage becomes stable. ● Purchase a device which can provide stabilized voltage.

Problems and solutions

A. Your washing machine is installed with the fuzzy logic control system which can automatically detect the unbalance of laundry during spin cycle. When the laundry is detected as unbalanced, or there is strong vibration in the washing machine, the machine will either extend the spin time to adjust the balance of the load or run at a lower speed while spinning in order to avoid damage to the machine.

B. When there is excessive foam, the time on the display will stop while the machine eliminates the foam. The machine will automatically return to the normal program once foam reduces to an appropriate level.

C. Before contacting After Sales or Service Department:

- Try to solve the problem (see "Troubleshooting").
- Restart the program to see if the fault still exists.
- If the fault persists, call after-sales service and describe the problem.


Product Specifications

SPHERE TRAVELWASH FLW25 - FRONT LOADING WASHING MACHINE		
Type		Fully automatic washing machine
Rated voltage and frequency		220V-240V/50Hz
Wash mode		Drum type
Spin mode		Centrifugal type
Rated wash and Spin capacity	Wash	2.5 kg
	Spin	2.5 kg
Rated consumed power		1300W
Tap water pressure(MPa)		0.05MPa-0.8MPa
External dimensions (mm)		500×415×630
Net weight (kg)		34kg
Rotation rate of wash		50RPM
Rotation rate of spin		700RPM
Product Warranty		1 Year, from date of purchase shown in official proof of purchase, issued by an authorised distributor.

This appliance is intended to be used in household and similar applications such as:

- Recreational Vehicles i.e. Caravans and Motorhomes;
- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- Bed and breakfast type environments;
- By clients in hotels, motels and other residential type environments.

Wiring Diagram

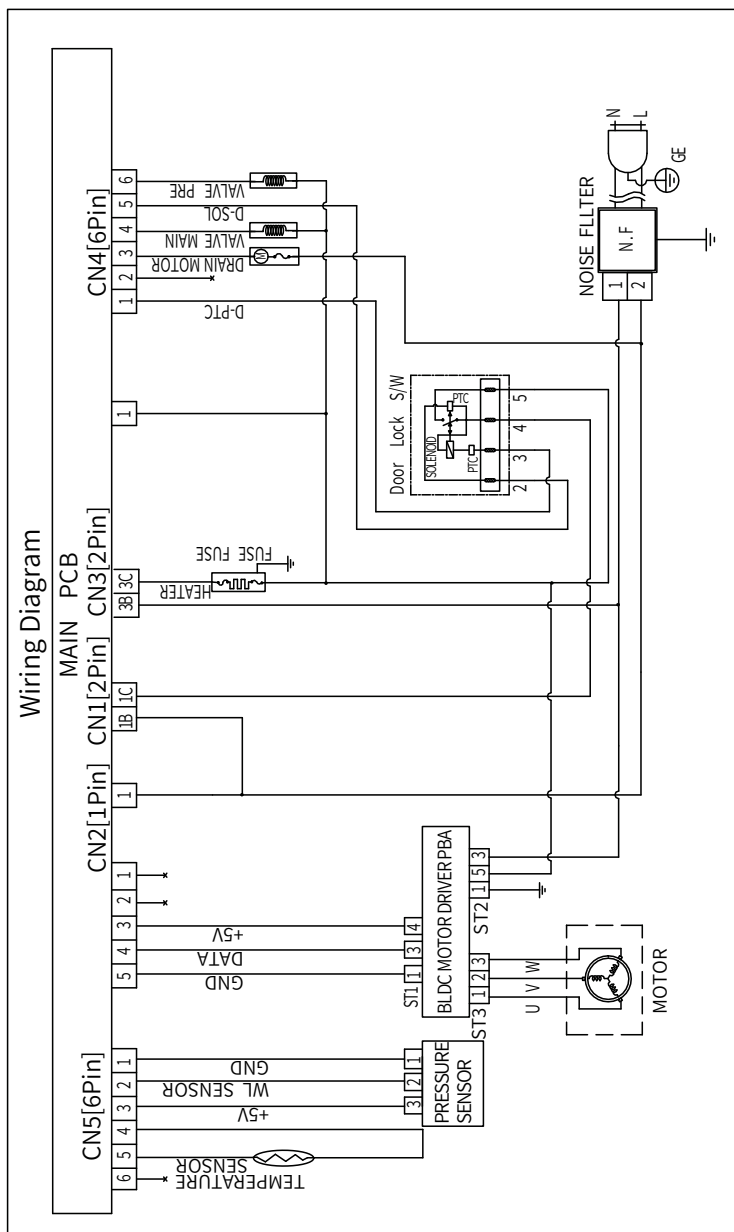

Customer Support & Warranty Information

ABN 49 097 104 492 - ACN 101 461 330
PO Box 6287, Silverwater NSW 1811

AUSTRALIA

Ph (02) 9645 7600 - Fax (02) 9645 7699

Email: warranty@coastrv.com.au

Web: www.coastrv.com.au



Coast to Coast RV Services

PO Box 58-054, Botany AUCKLAND 2163

NEW ZEALAND

Ph (09) 274 8700 – Fax (09) 274 8701

Email: enquiry@coastrv.co.nz

Web: www.coastrv.co.nz

Warranty Against Defects

1 WHAT THIS WARRANTY RELATES TO 1.1 This warranty covers goods supplied by Coast RV Pty Ltd T/A Coast to Coast RV Services ("Supplier") to the Client ("Goods") and relates to any defects in materials and workmanship under normal use and maintenance ("Defect").

2 WHAT THE SUPPLIER WILL DO TO HONOUR THE WARRANTY 2.1 The Supplier will:

- (i) replace or repair the Goods or the defective part of the Goods free of charge;
- (ii) arrange for the Goods or the defective part of the Goods to be repaired or replaced by a qualified repairer free of charge.

2.2 The Supplier reserves the right to replace defective parts of the Goods with parts and components of similar quality, grade or composition where an identical part or component is not available.

2.3 Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

3 WHAT THE CLIENT MUST DO TO CLAIM THE WARRANTY

3.1 To claim the benefit of the warranty, the Client will need to (sequentially):

- (i) first contact the Supplier; and
- (ii) present the defective Goods to the Supplier for inspection, including inspection for defective workmanship, or otherwise provide evidence of the claimed Defect, accompanied by evidence of proof of purchase and date of delivery, and if applicable, evidence of maintenance performed in accordance with the relevant maintenance schedules.

3.2 The claim listed in clause 3.1 may be made in person, or the claim may be sent to the address listed on this form, including the particulars required under clauses 3.1(i) and 3.1(ii).

3.3 The appropriate form for making a claim for warranty is as attached.

4 DURATION OF WARRANTY 4.1 This warranty will cease:

- (i) where the Goods are purchased already fitted in or as a component of a vehicle or RV: from the date that is twelve (12) months after the Client takes delivery of the vehicle or RV; and

Customer Support & Warranty Information

(ii) where the Goods are purchased separately or as an after-market item: from the date that is twelve (12) months from the date of purchase..

4.2 If a Defect does not materialise in the Goods prior to the date provided in clause 4.1, the Supplier will have no liability to the Client under this warranty.

5 RESPONSIBILITY FOR COSTS OF CLAIM UNDER THIS WARRANTY 5.1 The Supplier is responsible for the costs directly associated with repairing or replacing the Goods in accordance with clause 2.1 only.

5.2 Any works required to be completed in addition to fixing the Defect are the responsibility of the Client. Additional works includes any costs associated with any testing or repair of the Goods or any goods to which they are fitted, undertaken by a third party in relation to any defect without prior authorisation from the Supplier.

5.3 Where it is determined that the Goods do not have a Defect, the Client will be charged a GST exclusive inspection fee of forty-five dollars (\$45.00AUD in Australia or \$45.00NZD in New Zealand) plus freight costs for the return of the Goods, this is subject to change without notice.

5.4 The cost of delivery and insurance of the Goods to and from the Supplier, travel costs to and from the Supplier, and the cost of inspecting and testing the Goods are the sole responsibility of the Client.

6 WARRANTY LIMITATIONS

6.1 The Supplier makes no warranties or representations other than those set out in this warranty document except as is required by law.

6.2 The Supplier will not be liable under this warranty:

(i) to the Client or any other person for any consequential, direct or indirect loss, damage or costs incurred or suffered by the Client or any other person, including but not limited to damage to persons, other property, loss of turnover, loss of profits, loss of business or goodwill;

(ii) to the Client for transportation or travel costs which are the Client's responsibility;

(iii) for damage or defects in any Goods caused by improper transportation, storage or any other misuse, neglect or accident.

(iv) for the installation of the Goods. Any fault or defect due to installation should be referred to the installer. The Goods must be installed in accordance with the Manufacturer's instructions and any relevant legislation or code.

6.3 This warranty covers the Client only and it is not transferrable if the Goods are sold by the Client during the warranty period.

7 WARRANTY EXCLUSIONS

7.1 This warranty will not apply where:

(i) the Goods have been improperly modified or repaired or the Good's defect has arisen due to the Client's failure to properly install, fit, maintain, service or use the Goods in accordance with the specifications and instructions provided by the Manufacturer, including a failure to comply with the relevant maintenance schedule (where applicable);

(ii) the Supplier cannot establish any Defect in the Goods after testing;

(iii) the Goods have been used other than for the purpose for which they were designed;

Customer Support & Warranty Information

(iv) the Goods have been subject to abnormal conditions, including but not limited to temperature, pressure, stress, load or similar;

(v) the Client or installer have used or fitted non-genuine or non-approved parts and accessories to the Goods or have failed to use recommended parts and accessories;

(vi) the Good's defect has arisen due to abuse, misuse, neglect or accident;

(vii) the Goods have not been installed in accordance with the relevant instructions;

(viii) the Good's defect is caused by use or fair wear and tear of the Goods (or expendable parts).

8 RIGHTS AT LAW

8.1 The benefits given to the Client under this warranty are in addition to other rights and remedies of the Client at law in relation to the Goods.

8.2 In Australia our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the Goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty Providers Name:	Coast RV Pty Ltd trading as Coast to Coast RV Services ABN 49 097 104 492 - ACN 101 461 330
Warranty Providers Address:	PO Box 6287, Silverwater NSW 1811 Australia OR; PO Box 58-054 Botany AUCKLAND 2163 New Zealand
Client:	
Contact No.	
Description of Goods provided:	
Receipt enclosed: (tick box)	☐ YES ☐ NO
Receipt No:	
Description of defects (Give as much detail as possible. Use a separate page if required):	
Date of purchase/services provided:	

