

↗ DOMETIC AWNINGS 8700 SERIES



Dometic 8700

EN

Awning

Installation and Operating Manual

© 2022 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or be patent pending. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit documents.dometic.com.

Table of contents

1	Explanation of symbols	3
2	Important safety instructions for installation	4
3	Scope of delivery	4
4	Intended use	5
5	Technical description	6
6	Installing the awning	7
7	Using the awning	18
8	Cleaning and maintenance	25
9	Warranty	25
10	Disposal	26

1 Explanation of symbols



WARNING!
Safety instruction: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION!
Safety instruction: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.



NOTICE!
Indicates a situation that, if not avoided, can result in property damage.



NOTE

Supplementary information for operating the product.

2 Important safety instructions for installation

Please observe the prescribed safety instructions and stipulations from the vehicle manufacturer and service workshops.




WARNING!

- If you do not have sufficient technical knowledge for installing components in vehicles, you should have a specialist fit the awning to your vehicle.

3 Scope of delivery


The sail track is not supplied by Dometic and must be purchased separately and installed prior to the installation of the awning and hardware.

Fabric roller tube assembly (must be ordered separately)

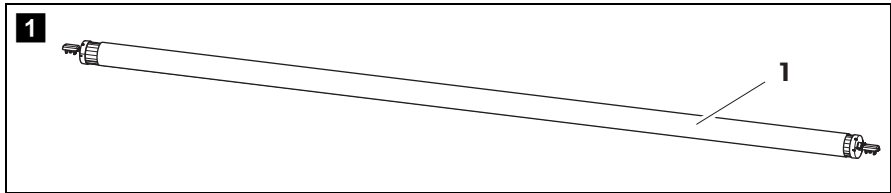

No. in fig. 1	Quantity	Description
1	1	Fabric roller tube assembly

Hardware (must be ordered separately)

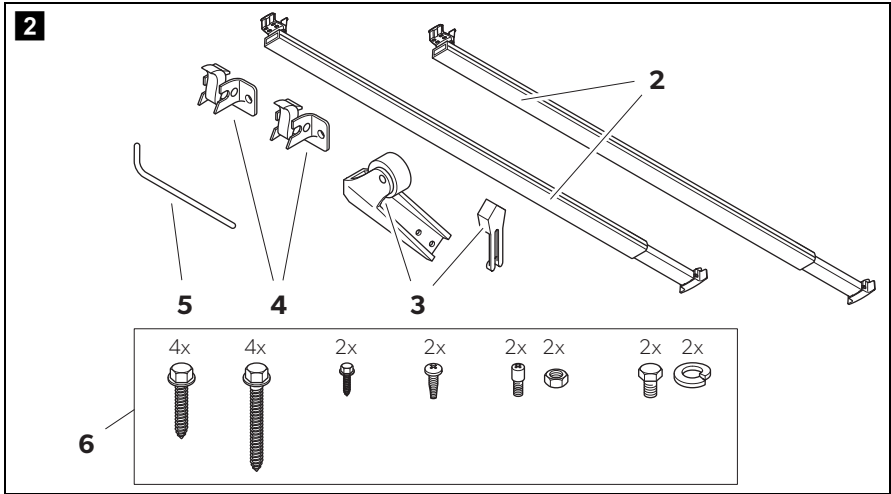

No. in fig. 2	Quantity	Description
2	2	Hardware assemblies
3	1	Door Roller Kit
4	2	Bottom mounting bracket
5	1	Pull rod
6	1 set	Fixing materials
–	1	Installation and Operating Manual

4 Intended use

The intended use of the awning is to provide shade.

The awning is to be used whilst the vehicle is stationary only.

This product is only suitable for the intended purpose and application in accordance with these instructions.


This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operating or maintenance will result in unsatisfactory performance and a possible failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or connection, including excess voltage
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in this manual

Dometic reserves the right to change product appearance and product specifications.

5 Technical description

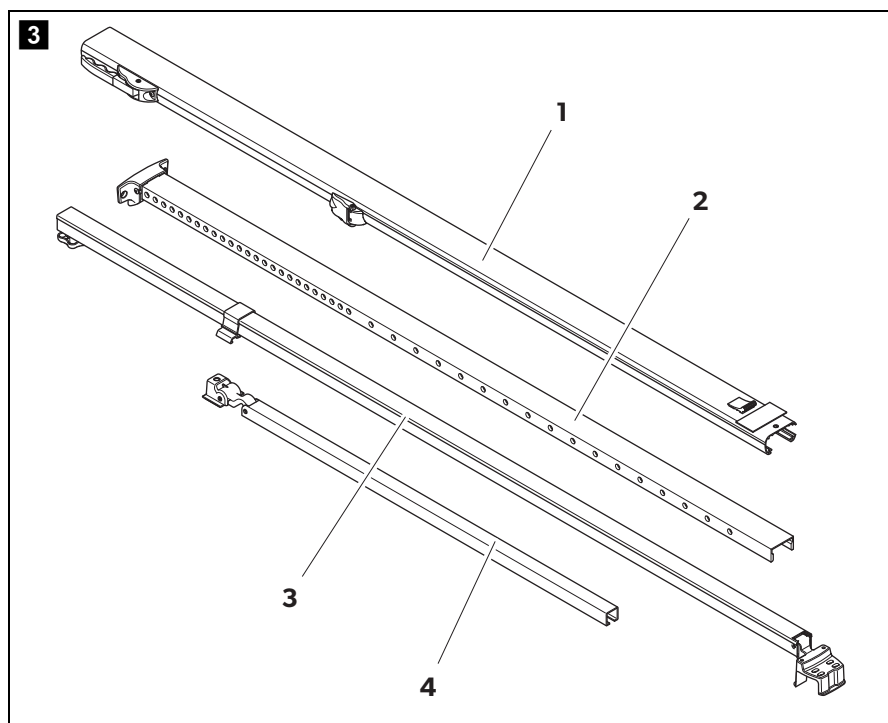

Hardware (fig. 3)	878HT-WH 878HT-BK (Tall – Black or White)	878HS-WH 878HS-BK (Standard – Black or White)	878HU-WH (Ultra short White)
Height range	1892 mm – 2235 mm	1626 mm – 1930 mm	1499 mm – 1676 mm
Main arm (1) length	1854 mm	1549 mm	1385 mm
Adjustable arm (2) length	1448 mm	1448 mm	1288 mm
Main rafter (3) length	1676 mm	1372 mm	1244 mm
Secondary rafter (4) length	826 mm	1130 mm	1130 mm

6 Installing the awning

6.1 Notes on the installation



WARNING! Failure to obey these warnings could result in death or serious injury.

Fire hazard/Electrocution hazard

- Make sure there are no obstacles (wires, pipes, etc.) on the RV's roof and inside the RV's walls.
- Shut **off** gas supply to the RV.
- Disconnect AC power from the RV, and disconnect the positive +12 V terminal from the supply battery(s) before drilling or cutting into the RV.

Impact or crush hazard

- The device may become unstable and could detach, bend, or collapse. Make sure mounting surface on the RV is flat, has solid structural backing where fasteners penetrate the surface, and will safely and securely support the product.
- Find a solid structure in the RV wall for support of top mounting brackets.

Impact or pinch hazard

- Rapid casting spin off may occur. Spring tension will attempt to close the awning quickly and unexpectedly.
Do **not** remove the nail from the torsion rod (at end cap) until **both** top castings are secured to the corresponding main arms, and the awning safety lock lever is in roll down position.
Straighten, remove, and discard the nail from the **left** end of the torsion rod only.



CAUTION! Failure to obey these cautions could result in minor or moderate injury.

Health hazard

- Use proper lifting technique and control when lifting the device.
- Maintain a horizontal distance of at least 410 mm between the fully open awning and any permanent objects.

**NOTICE! Damage hazard**





- Ensure that the awning rail is parallel to the RV floor, and is **not** warped or curved before installing awning fabric. If the awning rail is **not** straight, the awning fabric may wrinkle or stretch.
- Install back channels on a flat surface, level, and keep parallel with each other to ensure correct function and appearance.
- Use sealant after cleaning the parts and surfaces where fasteners enter the RV's roof and/or walls to prevent moisture from entering.
- Observe the sealant manufacturer's instructions.

**NOTE**

- A stepladder may be necessary to reach awning rail.
- Make sure arm assemblies do not restrict use of doors, windows, etc.
- It's recommended 2 people install the awning. There are instances detailed in the installing instructions that require 3 people to fit the awning.

6.2 Installing the awning

NOTICE

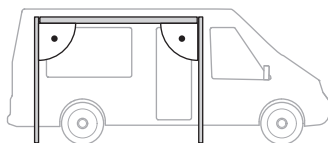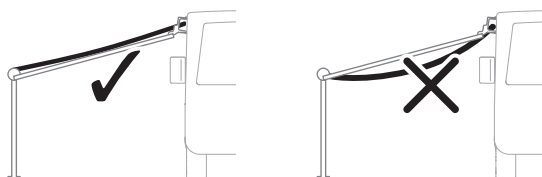
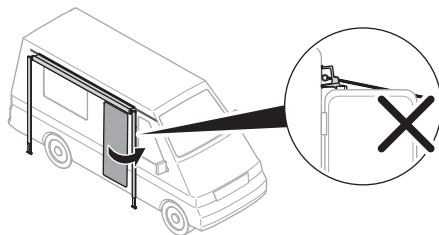
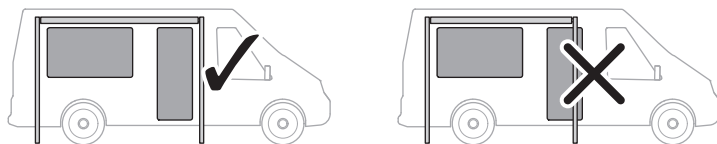



► Proceed as shown to install the awning (fig. **4**, page 10 to fig. **16**, page 17).





NOTE


- The awning length is set to suit the Dometic 8300 awning length.
- Any adjustment to the Dometic 8500 awning length must be made before installing the awning.
- Adjust the RH top casting to outer hole (fig. **4**, page 10) to fit the Dometic 8500 awning length.
- The LH top casting does not require adjustment.
- The pin (fig. **4**, page 10) has a special shape with steps on one end. Ensure to insert this end into the shaft first.

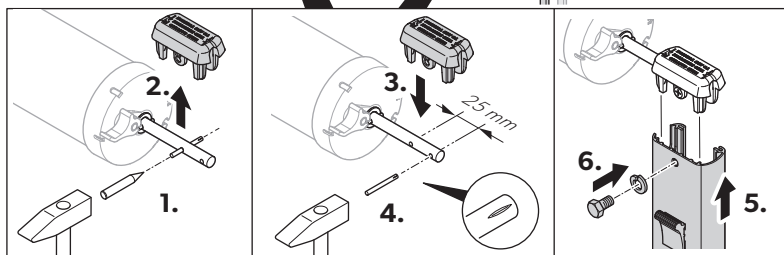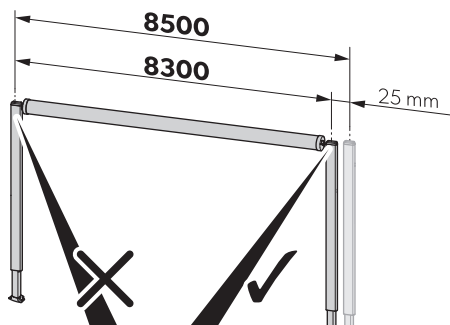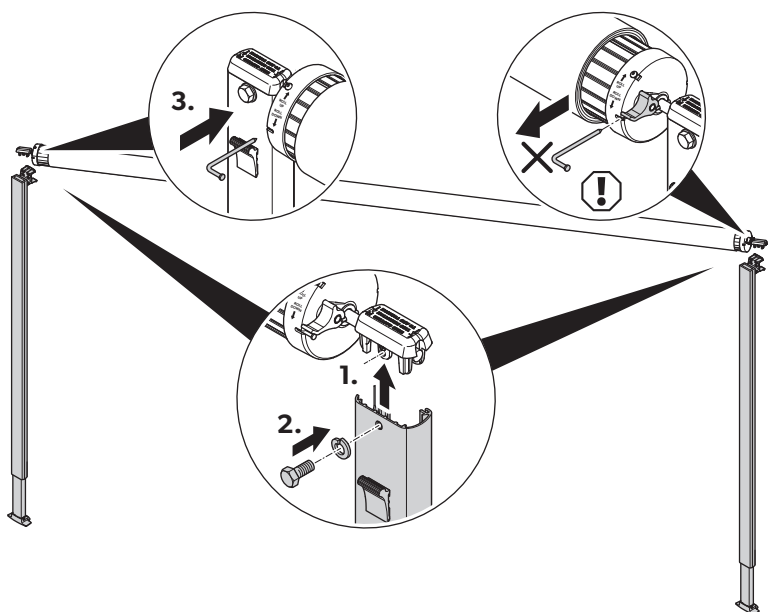4**5**

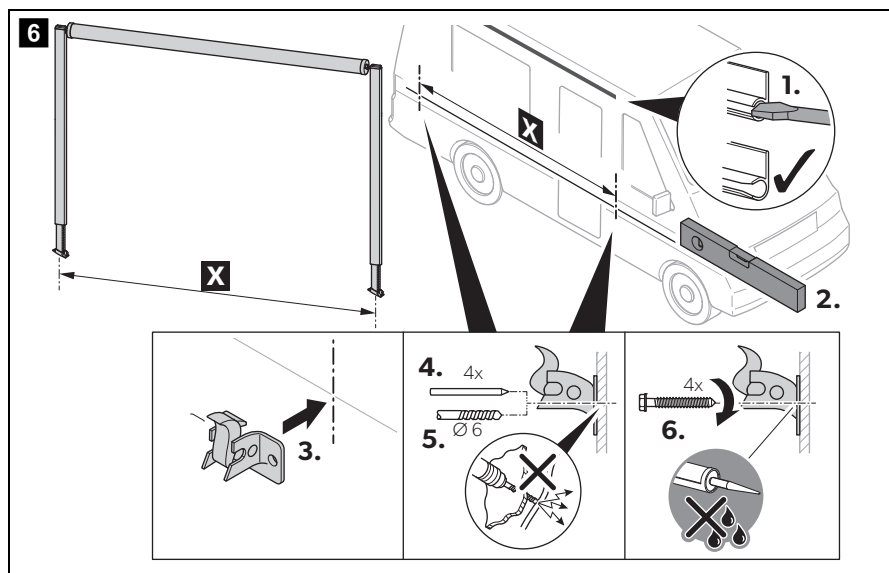**NOTE**

Unfurling the awning fabric by one revolution will allow enough space between the RV wall and the awning hardware to guide the fabric into the awning rail.

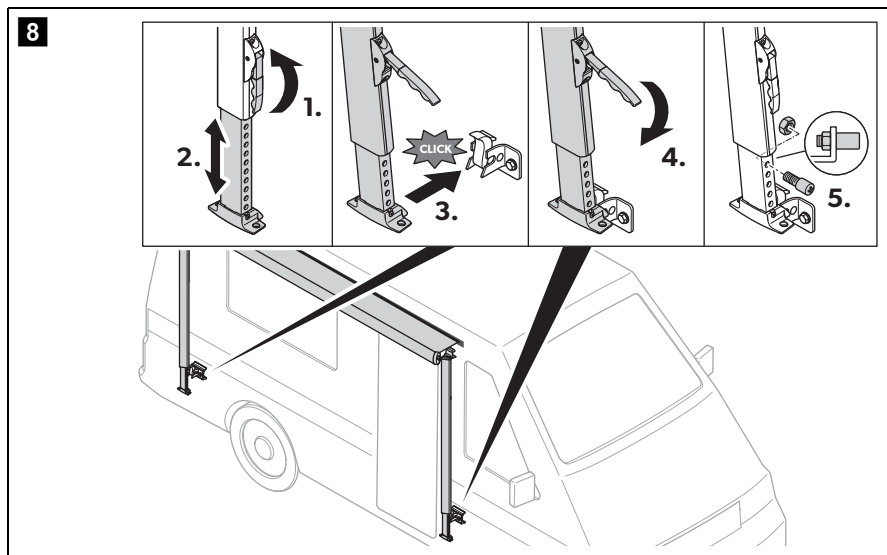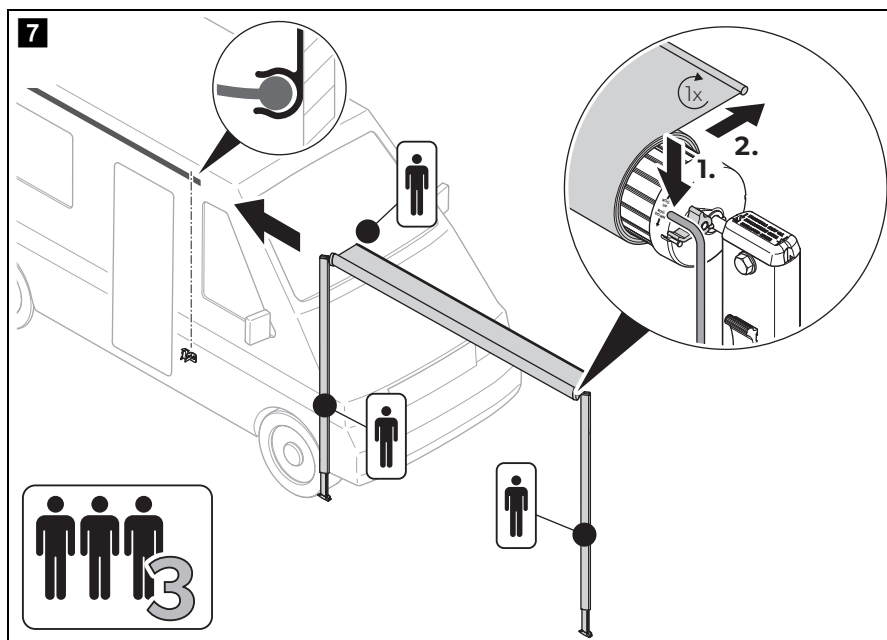

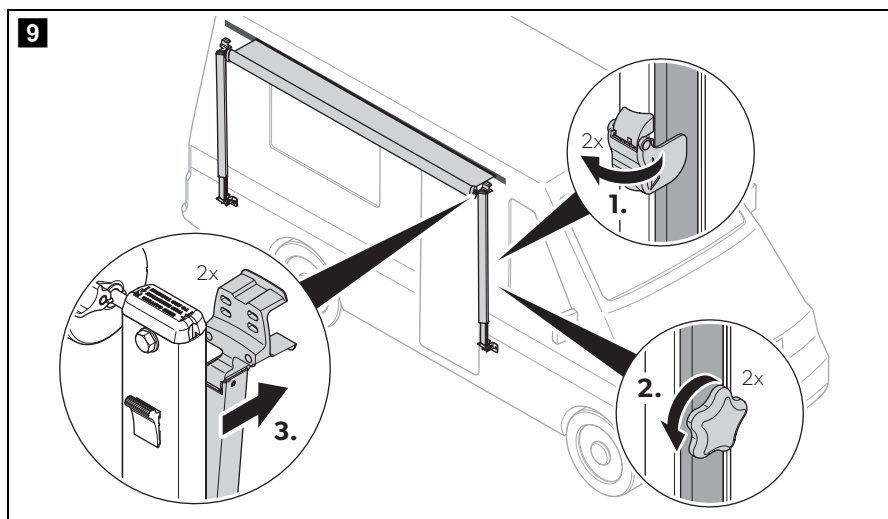


Installing the door roller kit




NOTICE! Damage hazard

If a squared corner entry door may contact the awning fabric, the door roller kit must be installed.

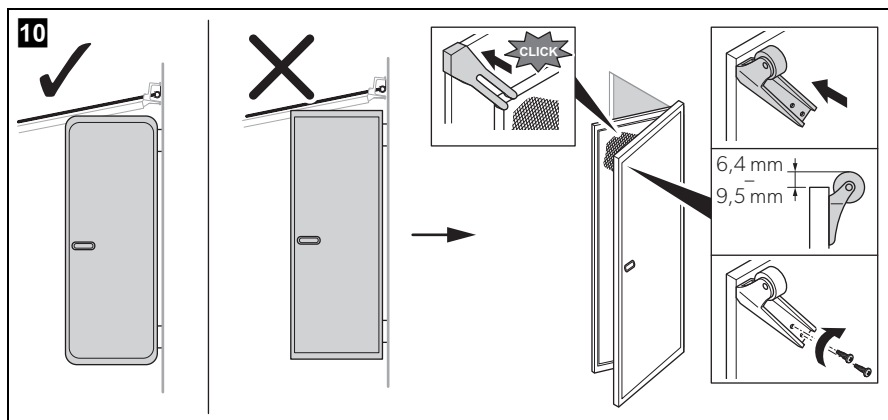


Choosing the mounting position for top mounting brackets (fig. 11)


- **A:** Mounting over awning rail
Do **not** use this position if the top mounting brackets will contact the rubber cap molding on the RV (roof with rounded corners)
- **B:** Mounting below awning rail
- **C:** Mounting on awning rail

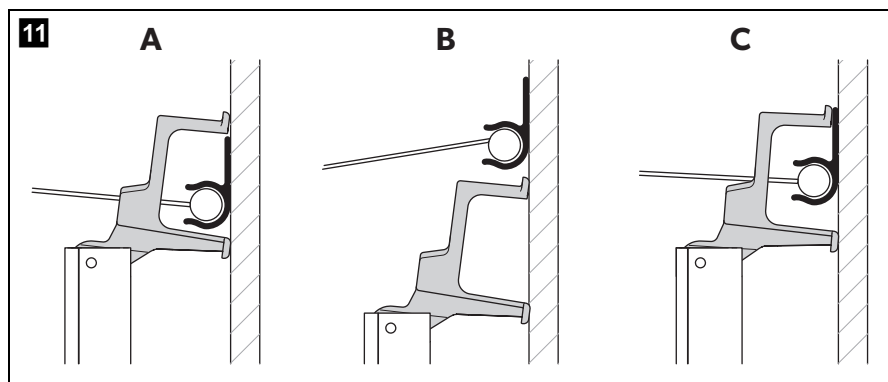

Installing the top mounting brackets


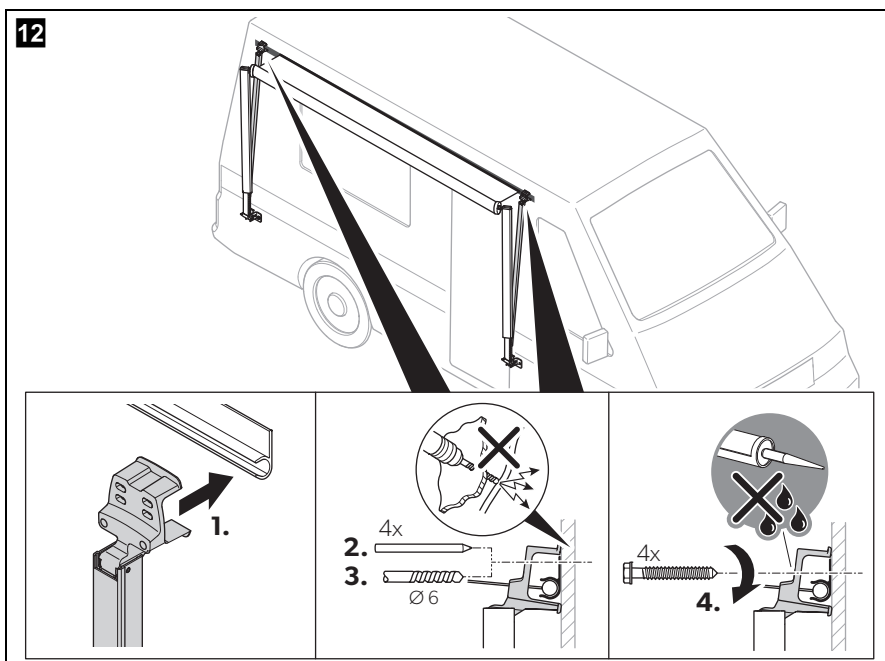


Releasing the preset tension

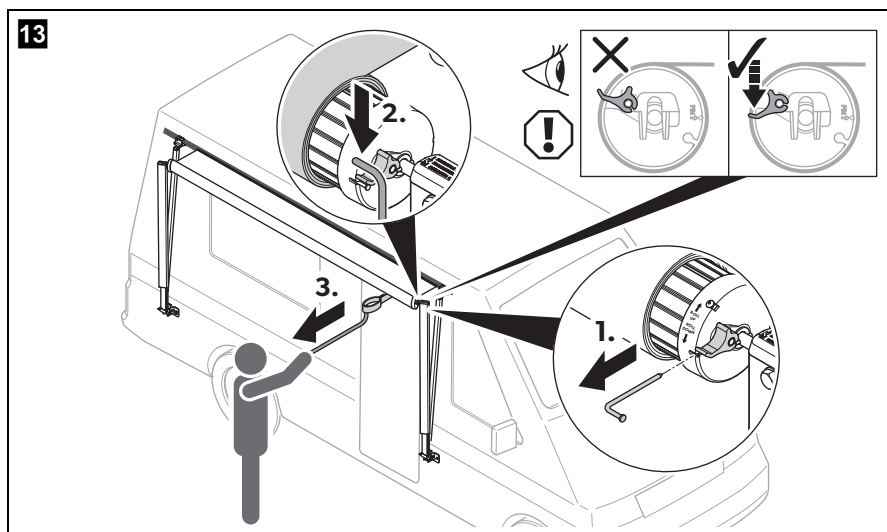


**NOTE**

Removing the pin will release the factory preset tension. To facilitate removal, you may need to twist the fabric roller tube (as if unrolling awning) by pulling the bottom of tube toward you while pulling on the pin.

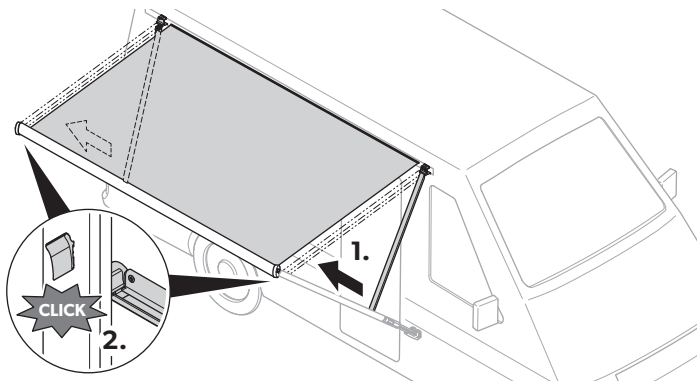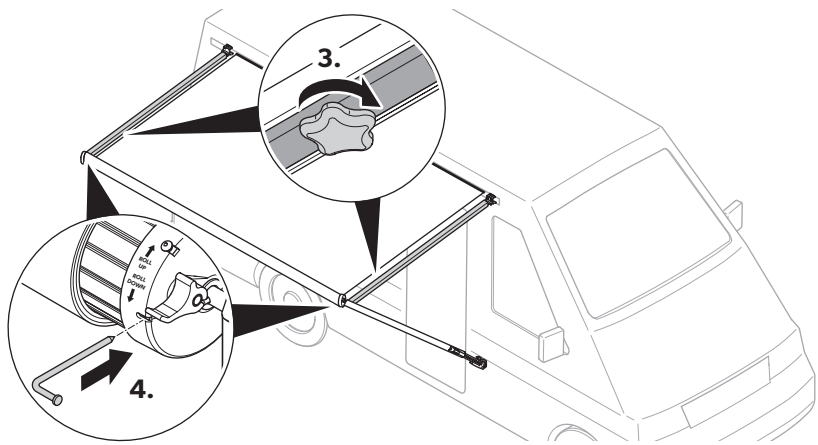14**15**

Securing the awning fabric to the awning rail

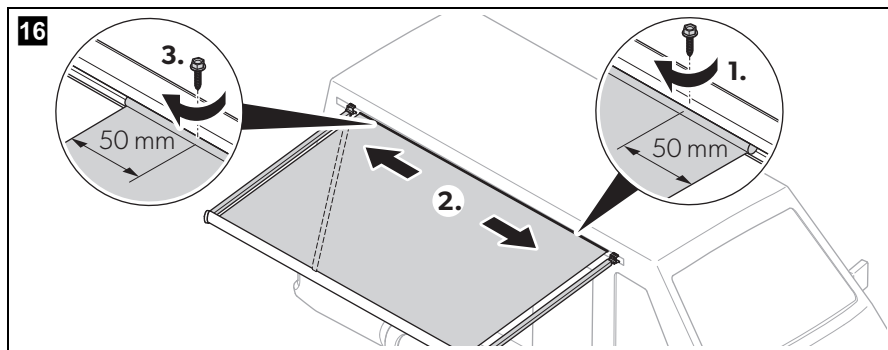


Verifying the installation

- Verify the installation by operating the awning according to verify all parts are functioning correctly (chapter "Using the awning" on page 18).


Open and close the awning four or five times to allow for natural self adjustment of the awning fabric.

7 Using the awning

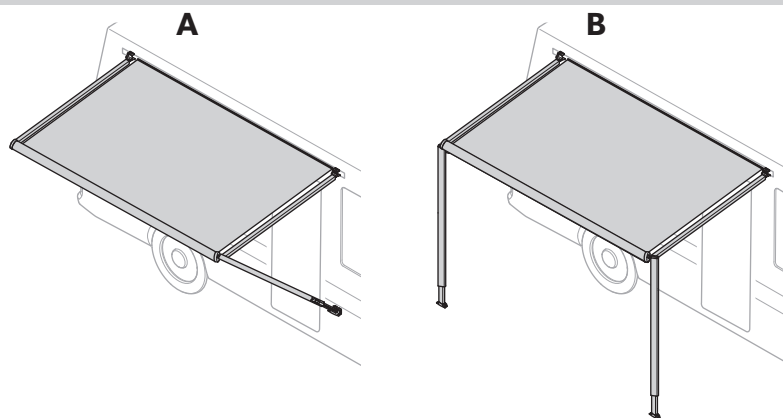NOTE

You can use the awning in opening position A or B.


7.1 Opening the awning



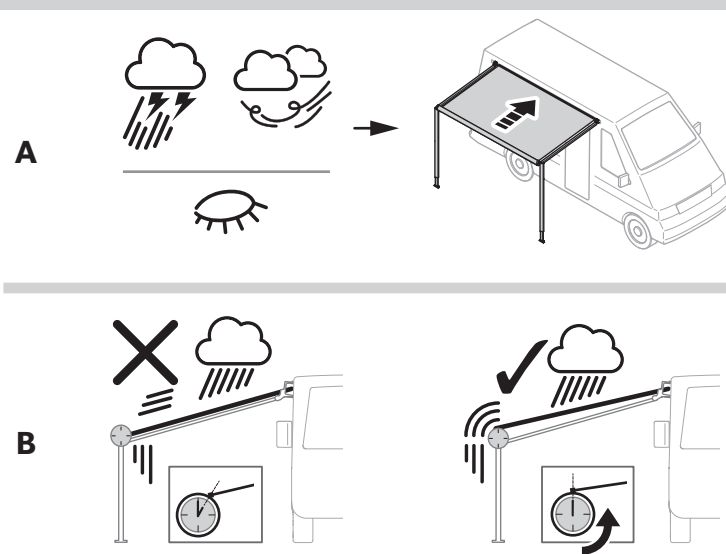
NOTICE

**NOTICE! Damage hazard**



- Ensure the awning is extended high enough before opening the entry door.
- Ensure the lock lever is not flipped to the “roll-up” position prior to swinging the main arm away from the RV. Failure to do so can cause damage to the lock mechanism.
- Whenever heavy or prolonged rain or wind is anticipated, or you will leave the awning unattended, it is best to close the awning. Damage as a result of weather is not covered by warranty (see **A** in figure above).
- Do **not** over extend the awning. This creates a gutter trapping water over the stitching as well as stretching the fabric, opening up the holes around the stitching. To remove the gutter and allow the water to run off the awning needs to be rolled back up so the RH seam is in the shown position (see **B** in figure above).


► Proceed as shown to open the awning (fig. **17**, page 19 to fig. **23**, page 22).

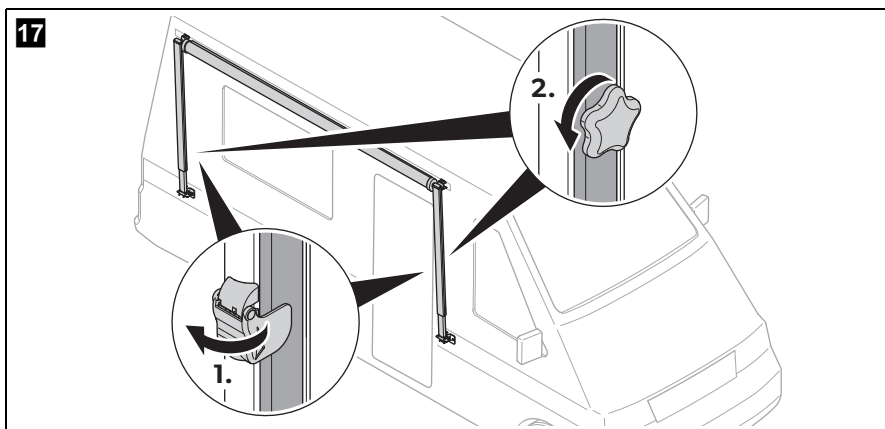

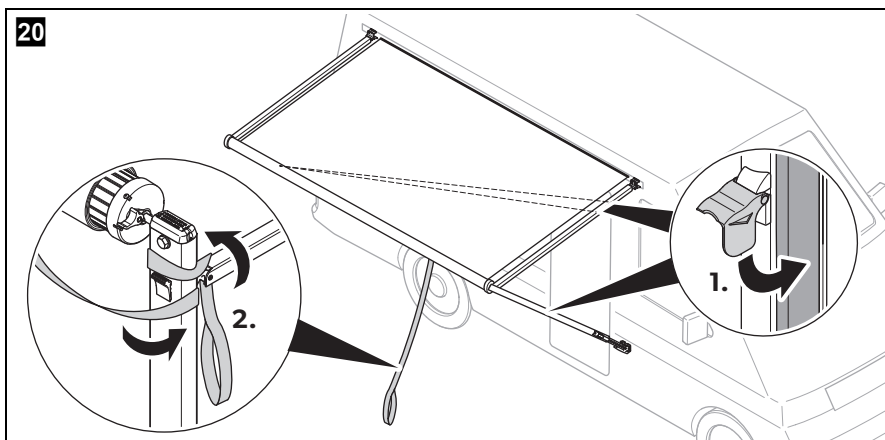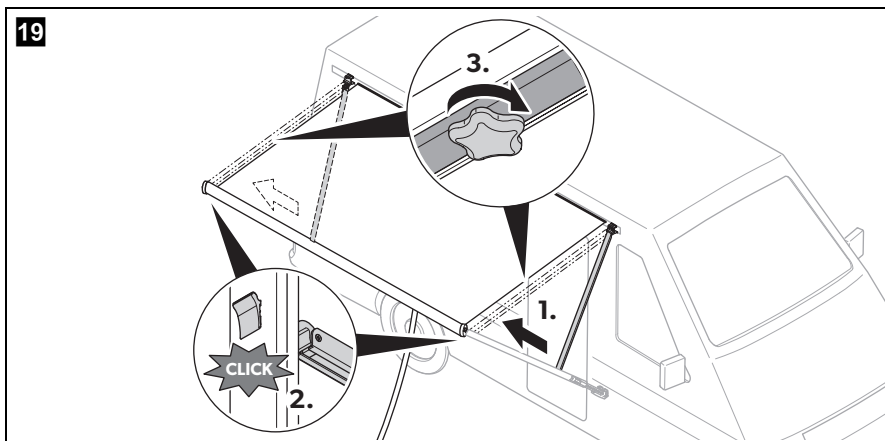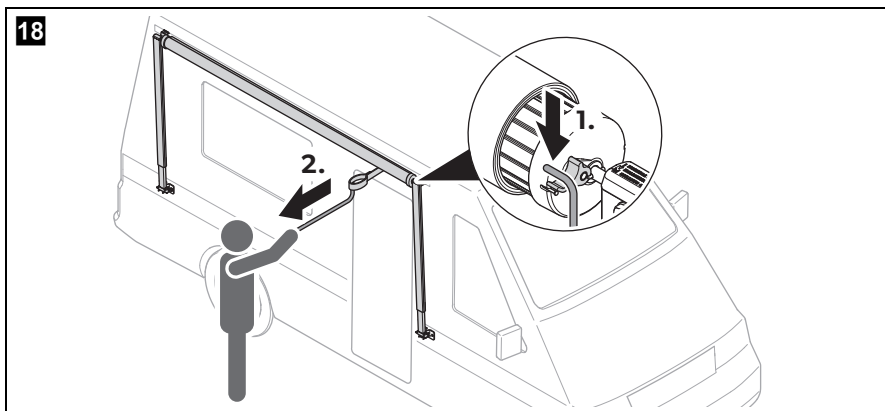

Opening the awning to position B (page 18)

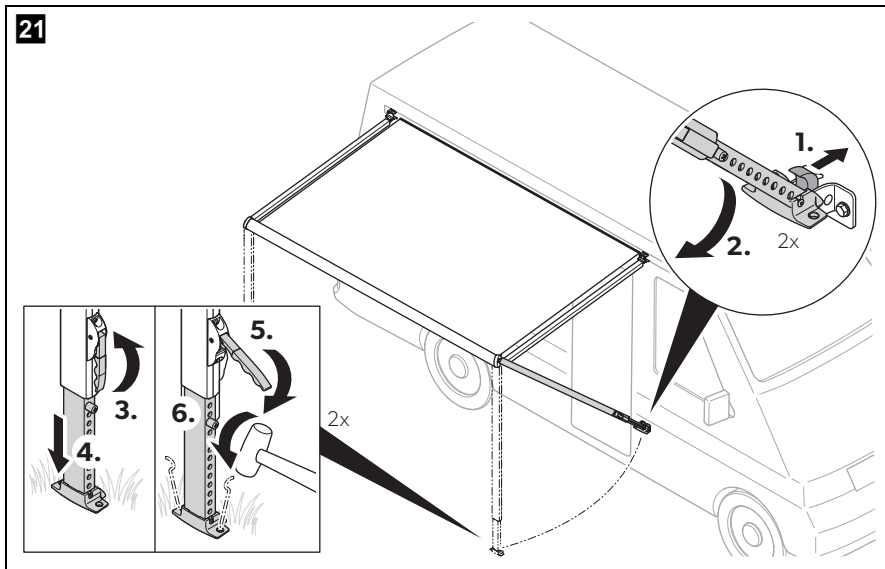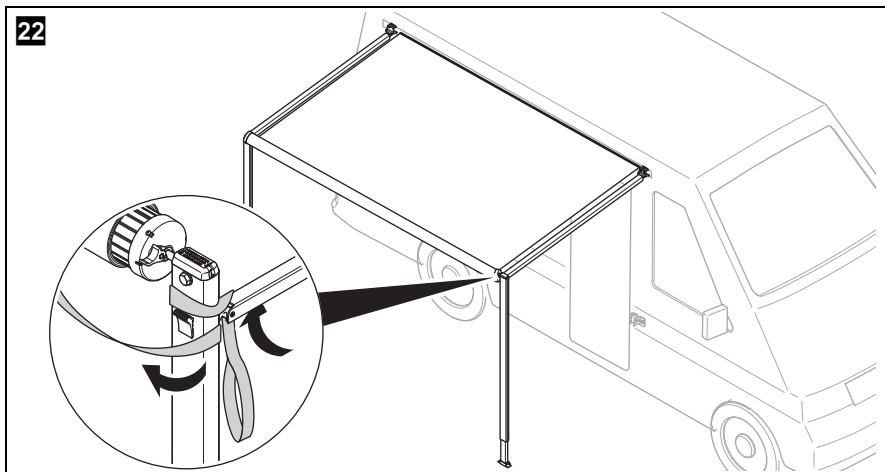21**22**

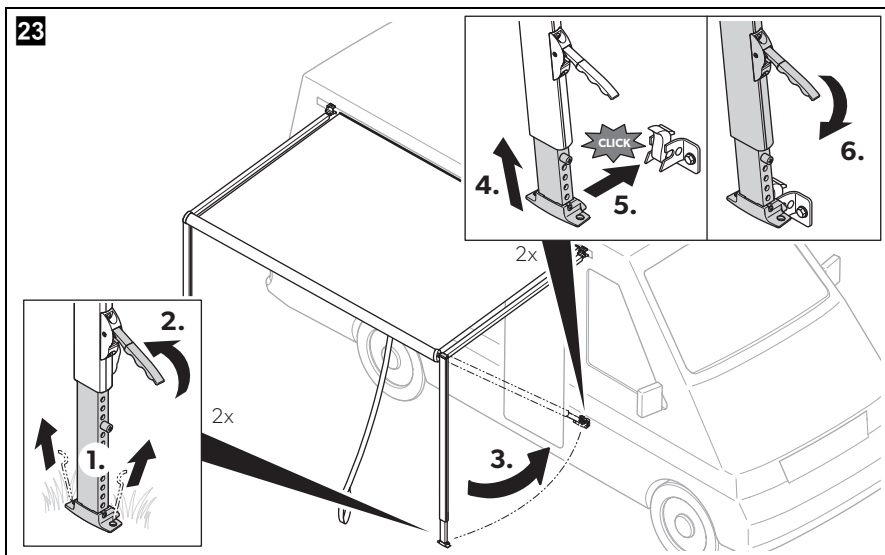



7.2 Closing the awning



NOTICE! Damage hazard



Ensure that the lock is in the “roll-down” position prior to swinging arms toward vehicle. Failure to do so can cause damage to the lock mechanism.

- Proceed as shown to close the awning (fig. **24**, page 23 to fig. **27**, page 24).

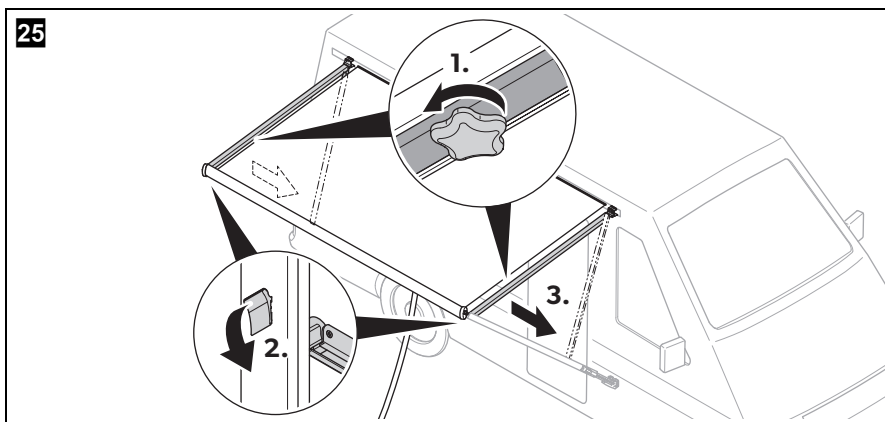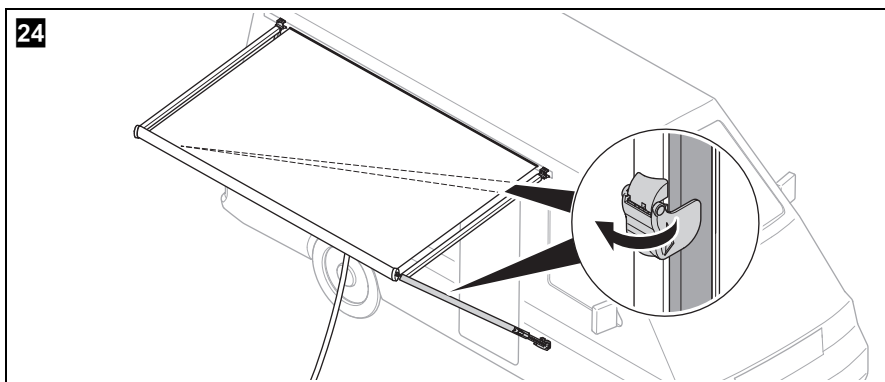

NOTICE! Damage hazard

Do not release the awning pull strap directly after turning the lock to the “roll-up” position. The awning is under tension and could snap back against the vehicle side.

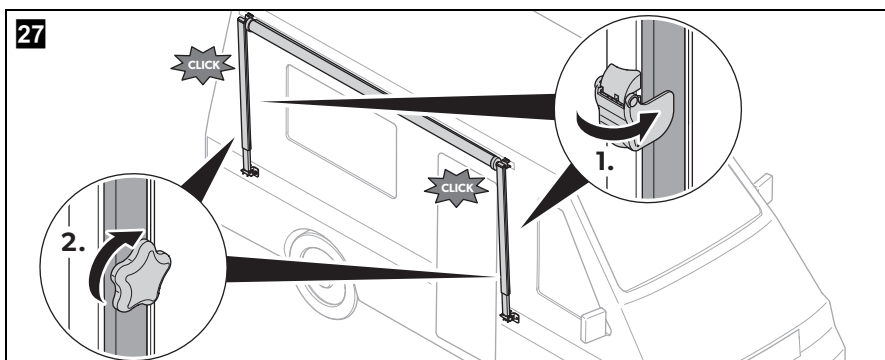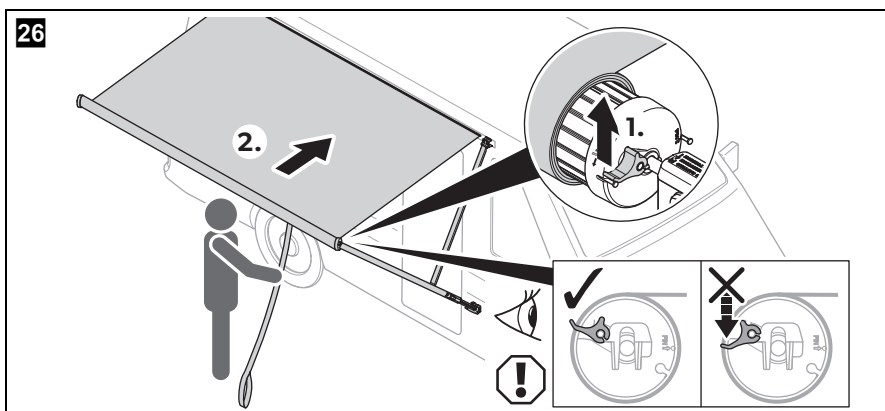

8 Cleaning and maintenance



NOTICE! Damage hazard

- **Never** clean the awning with a high-pressure washer.
- Do **not** use abrasive cleaning agents or sharp objects during cleaning, as these can damage the product.
- Do **not** use solvents to clean the fabric.

- ▶ Apply silicone spray lubricant as needed to keep the awning's moving parts operating smoothly. For ease of operation on hardware, rub candle wax on all sliding surfaces.
- ▶ Whenever the awning is wet whilst rolled up, as soon as conditions allow, roll it out and let it dry before rolling it up again. This will help prevent mildew and rotting.
- ▶ Mildew does not form on the fabric itself, but on the accumulated dust, dirt and grime. Periodically clean vinyl or woven acrylic:
 - Use a mixture of 1/4 cup dish soap, 1/4 cup bleach and 19 l of fresh water.
 - Soap the open awning with this mixture.
 - Roll it up.
Rolling up of the awning will apply the mixture to the underside of the fabric.
 - Let it stand for five minutes.
 - Unroll the awning and hose off the top and bottom with clean water.
 - Repeat if necessary and allow to completely dry.

9 Warranty

If the product does not work as it should, please contact your retailer or the manufacturer's branch in your country (see dometic.com/dealer). The warranty applicable to your product is 1 year year(s).

For repair and warranty processing, please include the following documents when you send in the device:

- A copy of the receipt with purchasing date
- A reason for the claim or description of the fault

Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

New Zealand only

This warranty policy is subject to the conditions and guarantees which are mandatory as implied by the Consumer Guarantees Act 1993(NZ).

Local support

Please find local support at the following link address: dometic.com/dealer

10 Disposal



- Place the packaging material in the appropriate recycling waste bins wherever possible.
- Consult a local recycling center or specialist dealer for details about how to dispose of the product in accordance with the applicable disposal regulations.



dometic.com

**YOUR LOCAL
DEALER**

dometic.com/dealer

**YOUR LOCAL
SUPPORT**

dometic.com/contact

**YOUR LOCAL
SALES OFFICE**

dometic.com/sales-offices

A complete list of Dometic companies, which comprise the Dometic Group, can be found in the public filings of:
DOMETIC GROUP AB Hemvärnsgatan 15 SE-17154 Solna Sweden